 

 


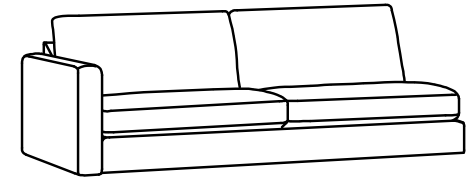


SEATER



WITH ARMREST





I

A	2	 Plastic
B	2	 No. 281 3 cm
C	8	
D	2	 No. 525 3 cm
E	6	 Plastic

  II

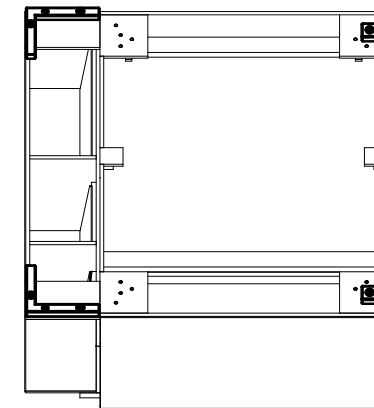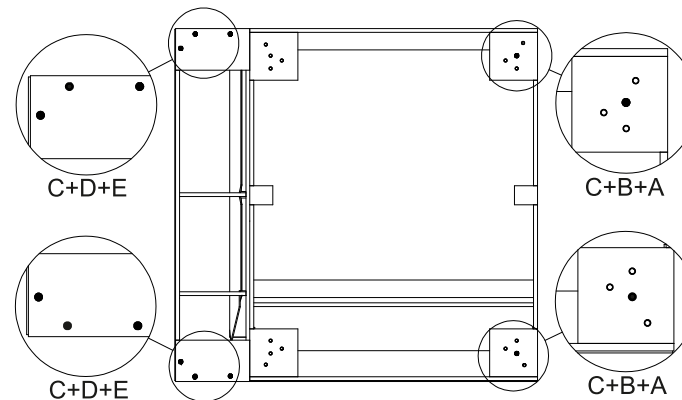

III

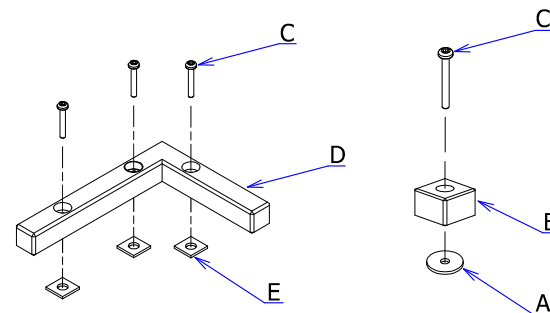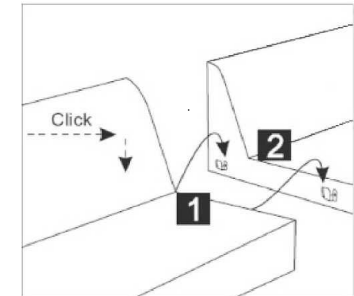  


IMPORTANT

The direction in which the hooks are connected, goes from left to right.
At least two people are necessary to lift the sofa, do not lift the sofa alone or push it.
It may cause damage in the connecting mechanisms and may create creaking noise in furniture.
The sofa has to be placed on a flat and leveled surface.
While attaching parts make sure hooks No. 1 fit with hooks No. 2.




VILMERS

 SEATER

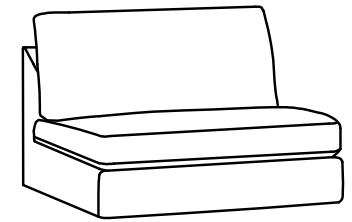


MODULAR SOFA

  
 
I

A	4	 Plastic
B	4	
C	4	 No. 281 3 cm

 II

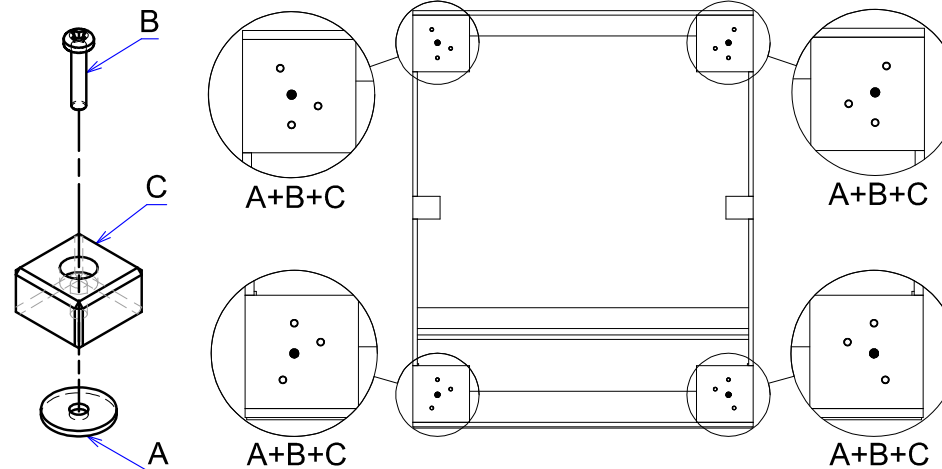

III

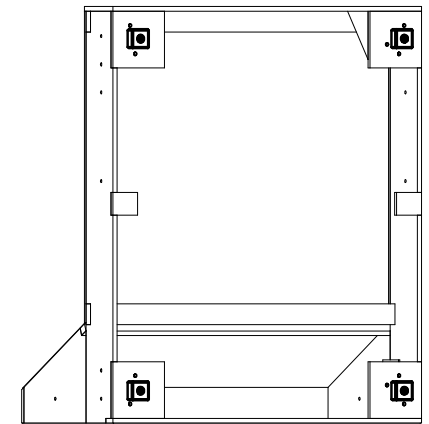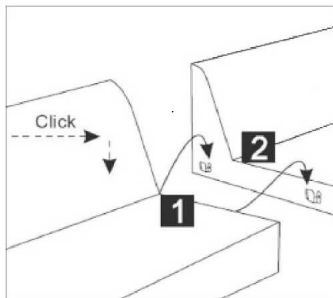  


IMPORTANT




The direction in which the hooks are connected, goes from left to right.
At least two people are necessary to lift the sofa, do not lift the sofa alone or push it.
It may cause damage in the connecting mechanisms and may create creaking noise in furniture.
The sofa has to be placed on a flat and leveled surface.
While attaching parts make sure hooks No. 1 fit with hooks No. 2.

VILMERS


 
CORNER

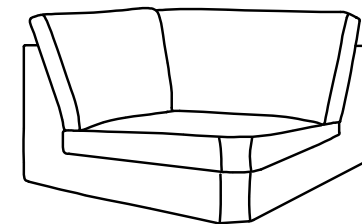


I

   A	4	 Plastic
B	4	
C	4	 No. 281 3 cm

  II

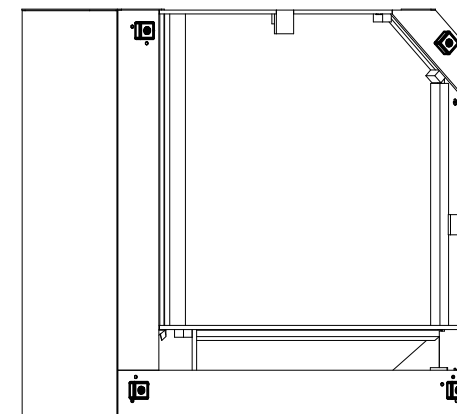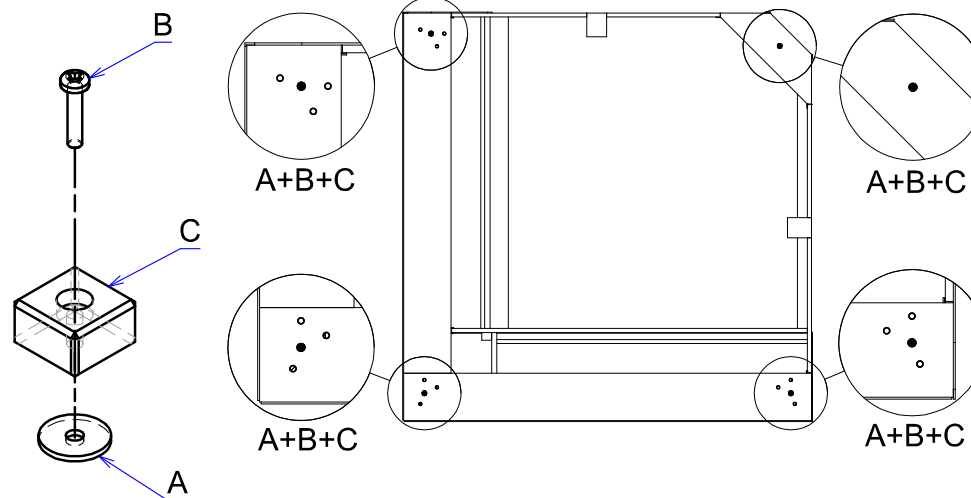

III

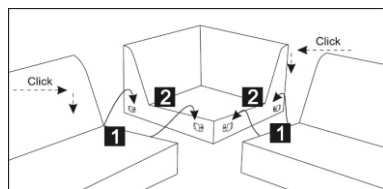 

IMPORTANT

The direction in which the hooks are connected, goes from left to right.
At least two people are necessary to lift the sofa, do not lift the sofa alone or push it.
It may cause damage in the connecting mechanisms and may create creaking noise in furniture.
The sofa has to be placed on a flat and leveled surface.
While attaching parts make sure hooks No. 1 fit with hooks No. 2.

VILMERS

 
 
 


SEATER

WITH ARMREST






MODULAR SOFA


I

A	6	 Plastic
B	8	
C	2	 No. 281 3 cm
D	2	 Plastic
E	2	 No. 525 3 cm

   II

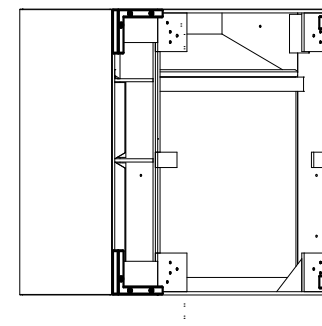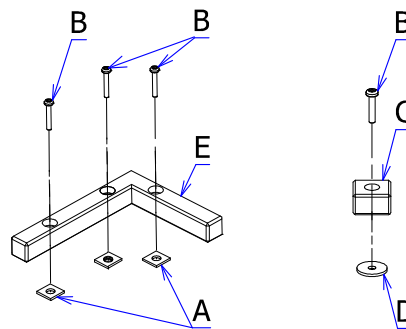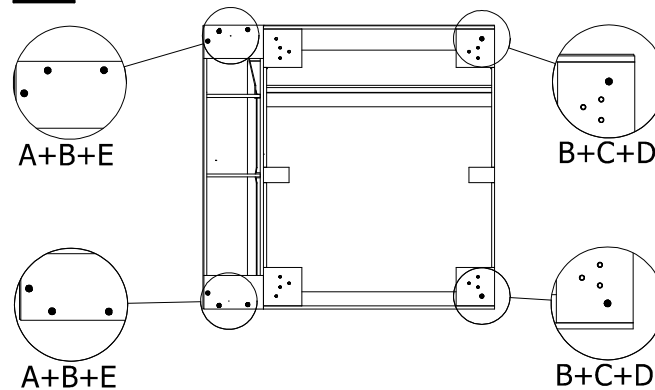

III

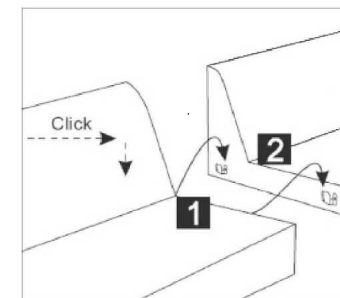 

IMPORTANT

The direction in which the hooks are connected, goes from left to right.
At least two people are necessary to lift the sofa, do not lift the sofa alone or push it.
It may cause damage in the connecting mechanisms and may create creaking noise in furniture.
The sofa has to be placed on a flat and leveled surface.
While attaching parts make sure hooks No. 1 fit with hooks No. 2.

VILMERS