

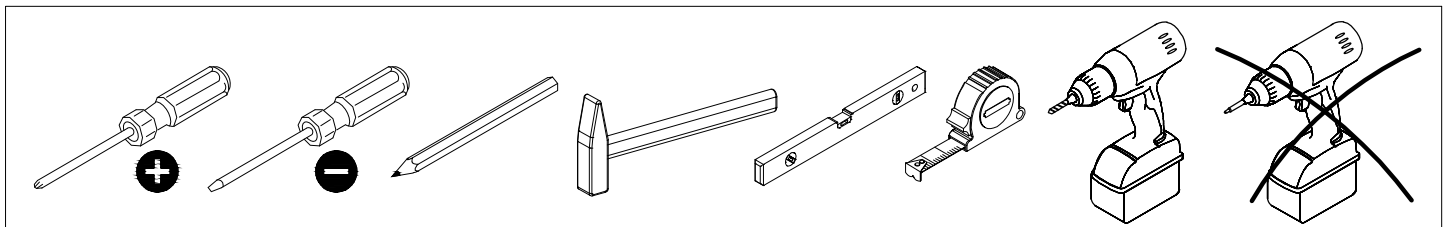
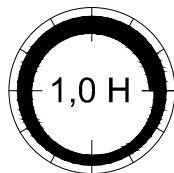
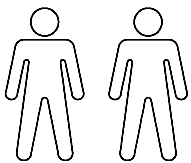


















LUKAS

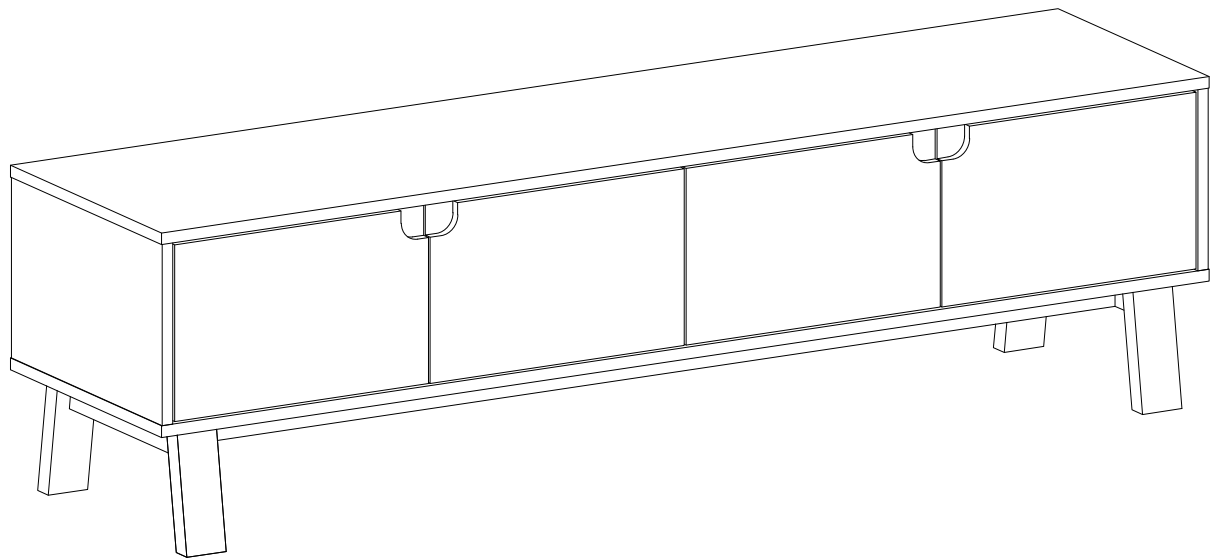




			✓
①	1	1600 x 400 x 16	
②	1	248 x 399 x 16	
③	1	248 x 399 x 16	
④	1	248 x 363 x 16	
⑤	1	1600 x 400 x 16	
⑥	2	772 x 300 x 16	

			✓
⑦	2	395 x 60 x 170	
⑧	1	1576 x 257 x 3	
⑨	1	242 x 388 x 19	
⑩	1	242 x 388 x 19	
⑪	1	242 x 388 x 19	
⑫	1	242 x 388 x 19	



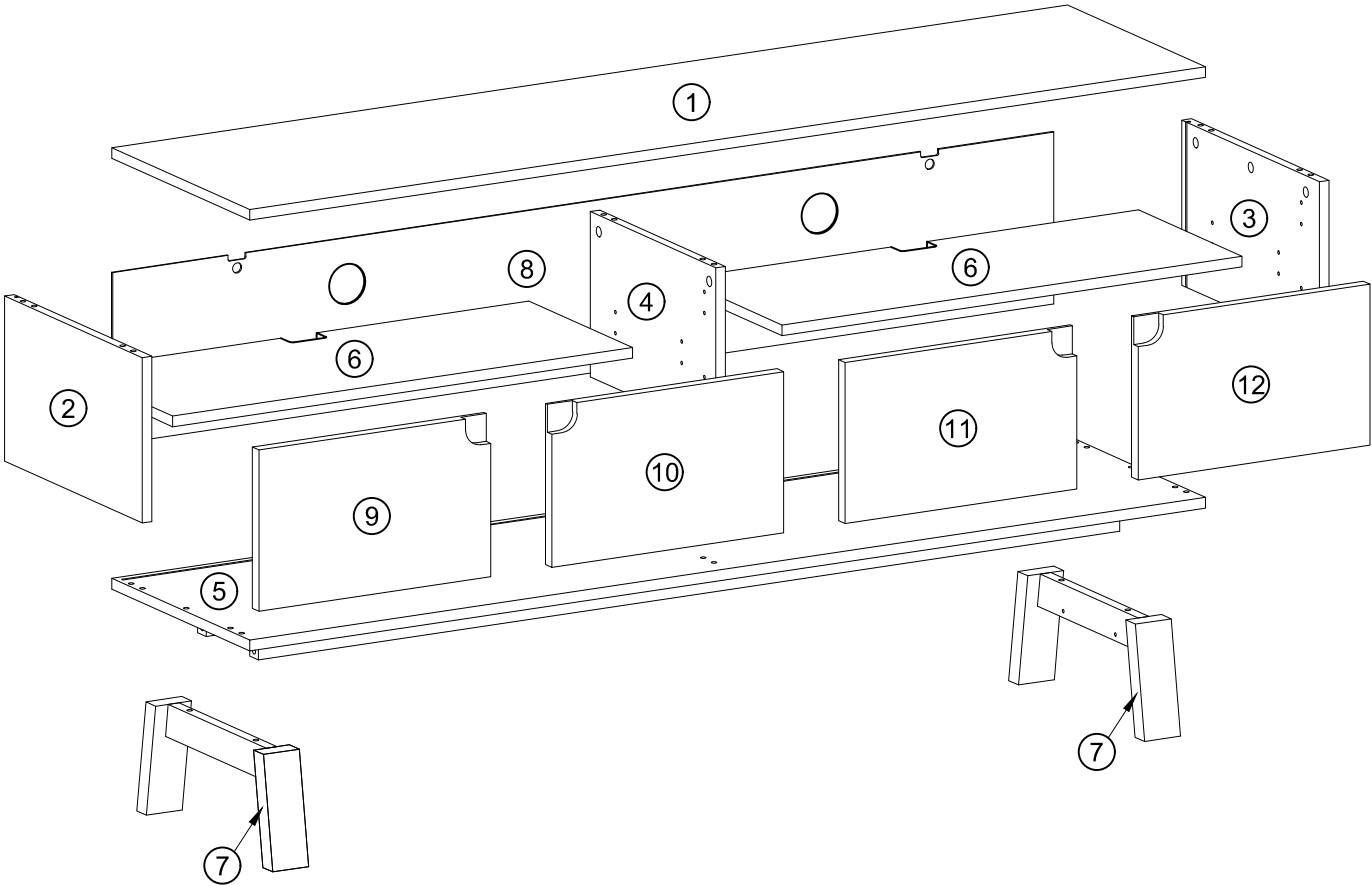


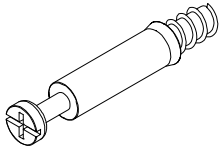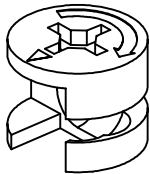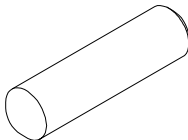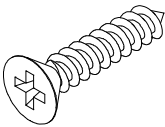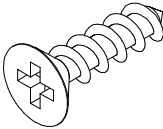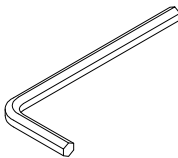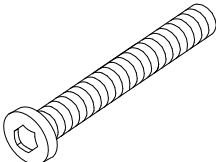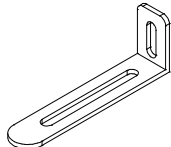A x 12  Ø7x34 mm	B x 12  Ø15x11 mm	C x 8  Ø7x50 mm	D x 12  Ø8x30 mm	E x 8  15x15x10mm
F x 8  Ø3x20 mm	G x 20  Ø3.5x15 mm	H x 1  4 mm	J x 4  M6x45 mm	K x 8  Ø5 mm
L x 2  Ø4x18 mm	M x 4  Ø35, FK 17	N x 4  Ø35, FK 9	P x 6  Ø4/Ø12 mm	Q x 2  75x15x25mm
R x 4  Ø5,6/Ø6,4x22/9 mm				



1

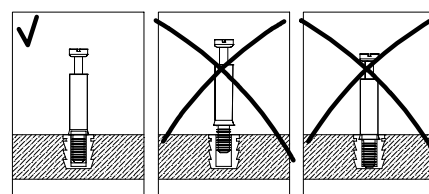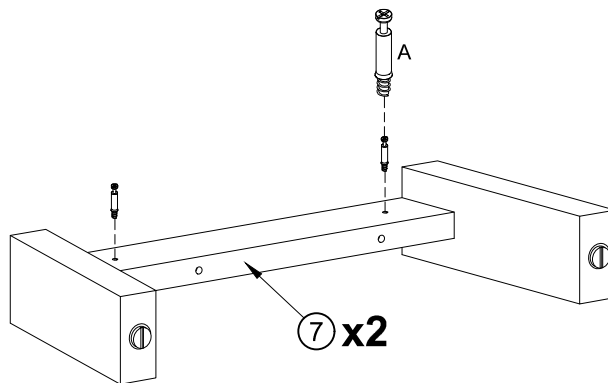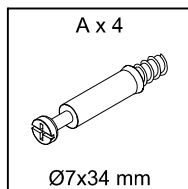







2

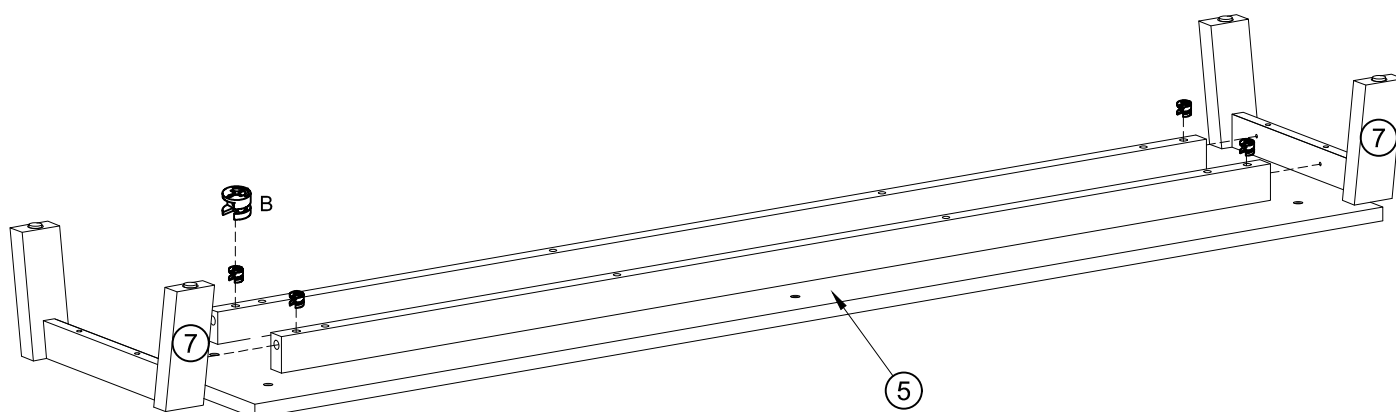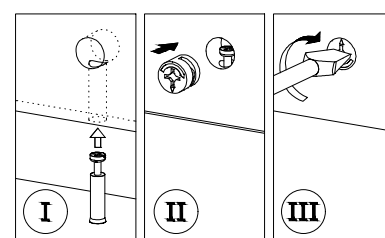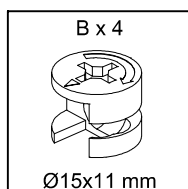




3

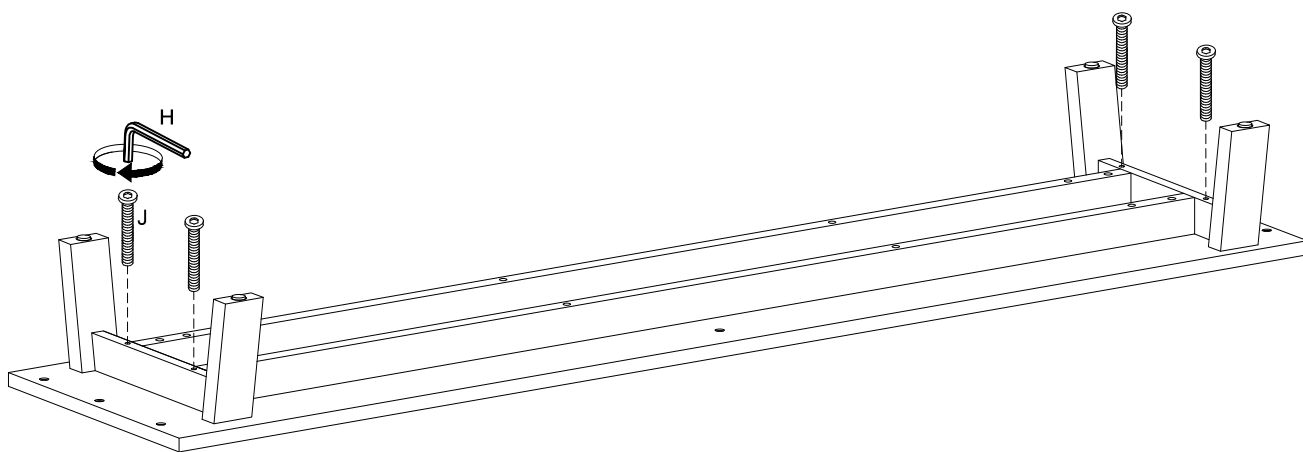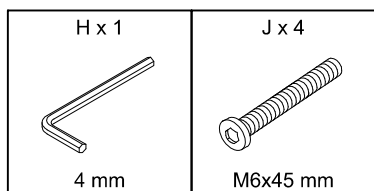

4

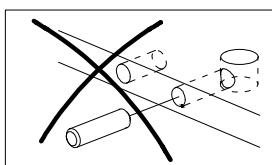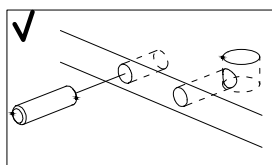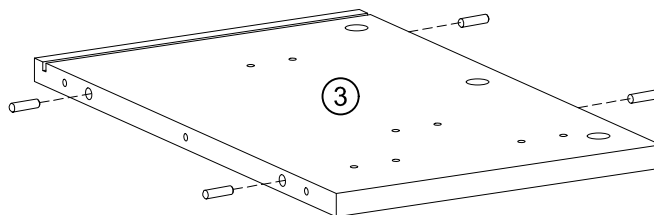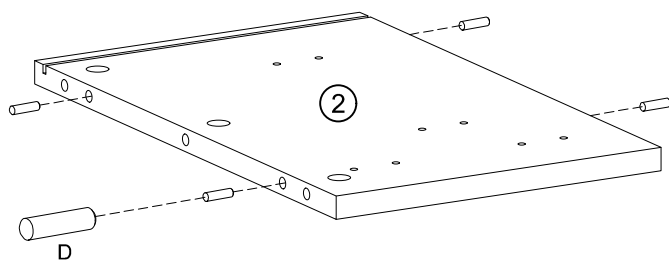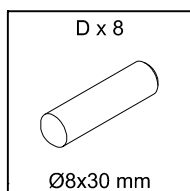

5

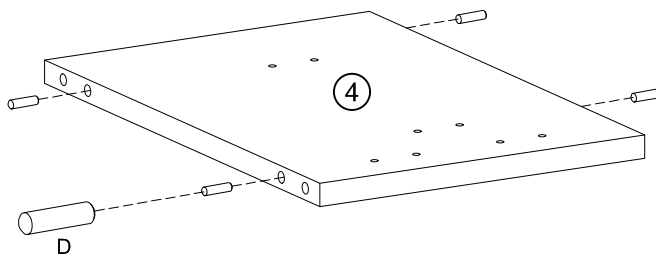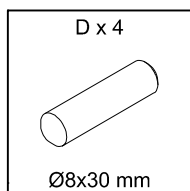

6



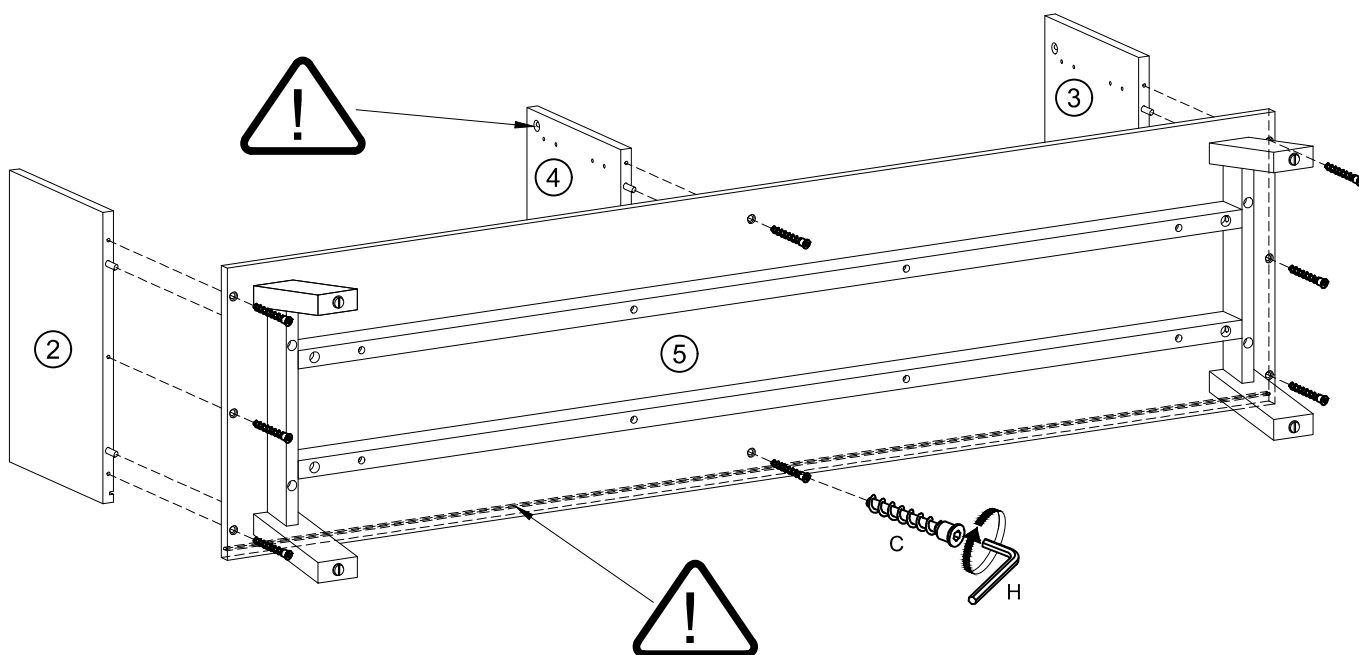


Diagram 8 illustrates the step of attaching the backrest to the sofa frame. A large warning triangle with an exclamation mark is shown above the backrest panel. The backrest panel is being lowered into place, guided by a downward arrow. The panel features a circular cutout and a slot for a screw. The sofa frame is shown with a central divider and a right-side panel, both with pre-drilled holes for screws. The backrest panel is being aligned with the frame to be secured with screws.



A x 8

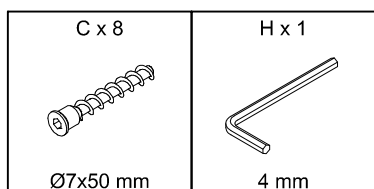






Ø7x34 mm

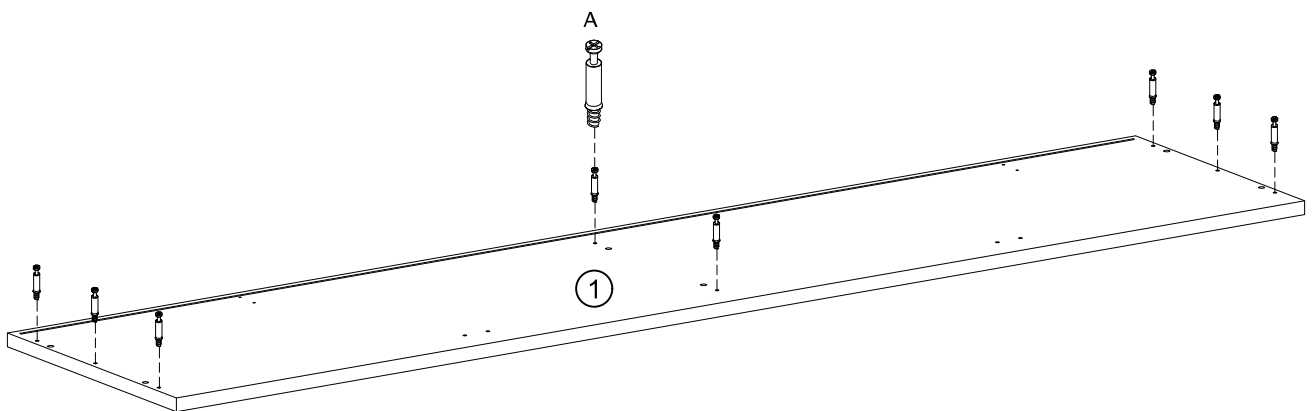



9

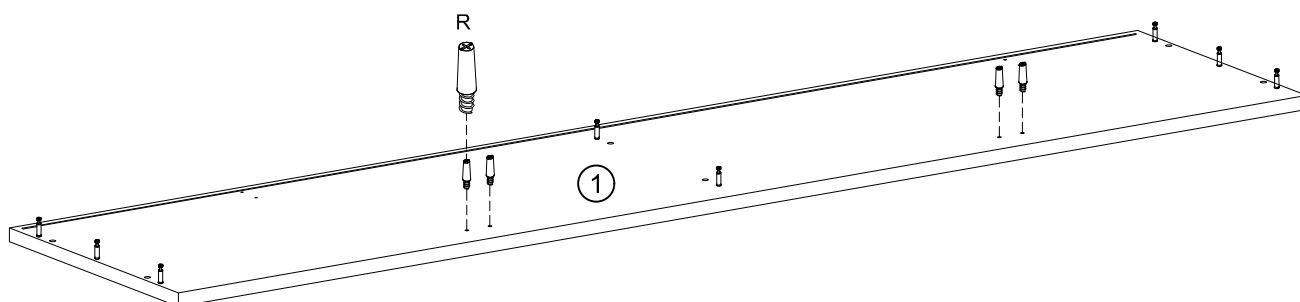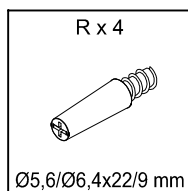


10

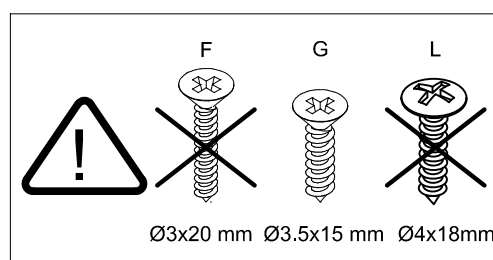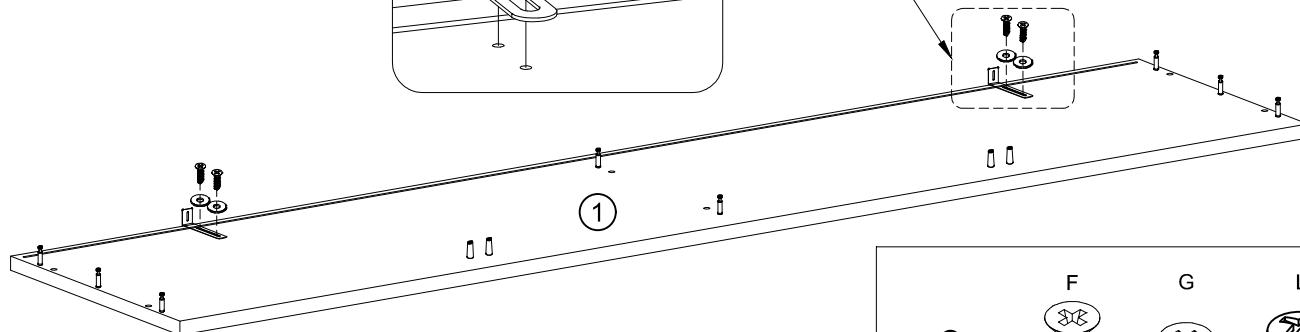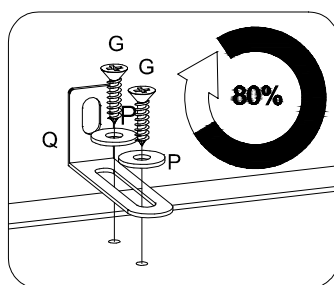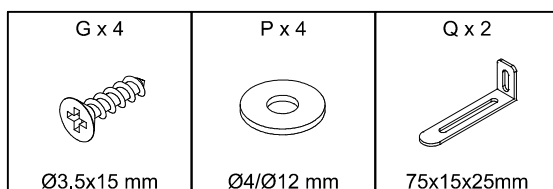


11

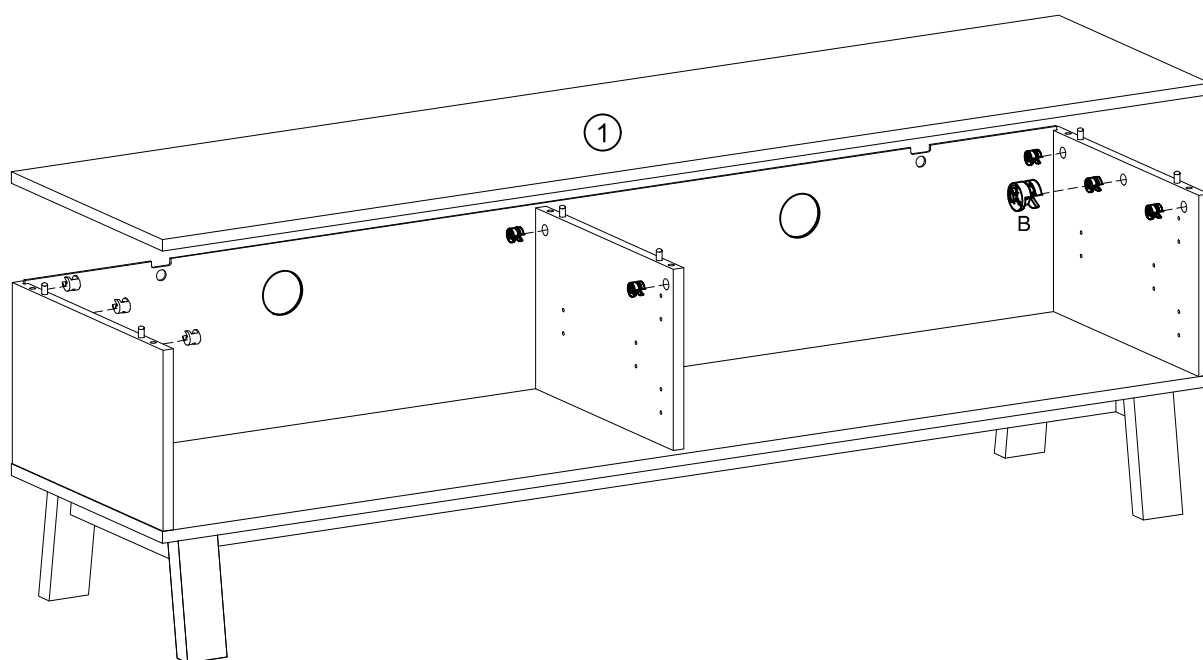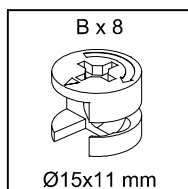




12

E x 8	F x 8	L x 2
		
15x15x10mm	Ø3x20 mm	Ø4x18 mm





+

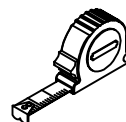





X=Y

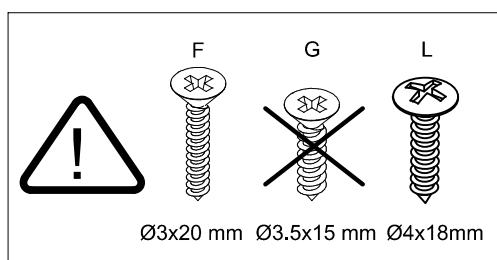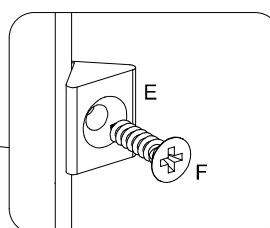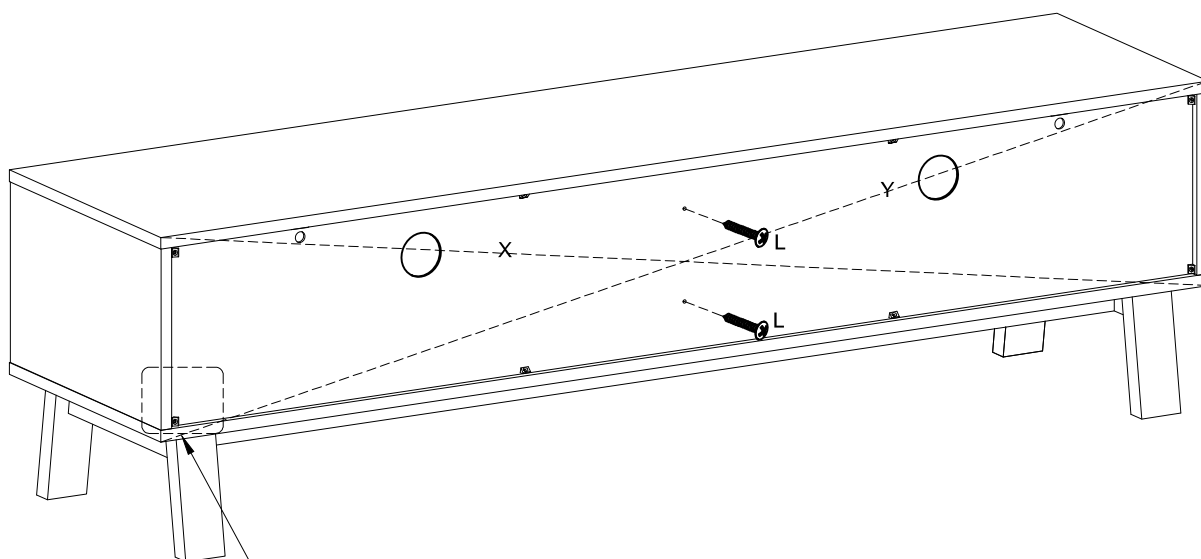




13

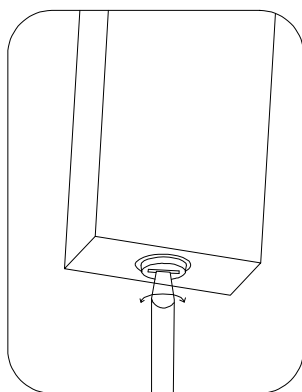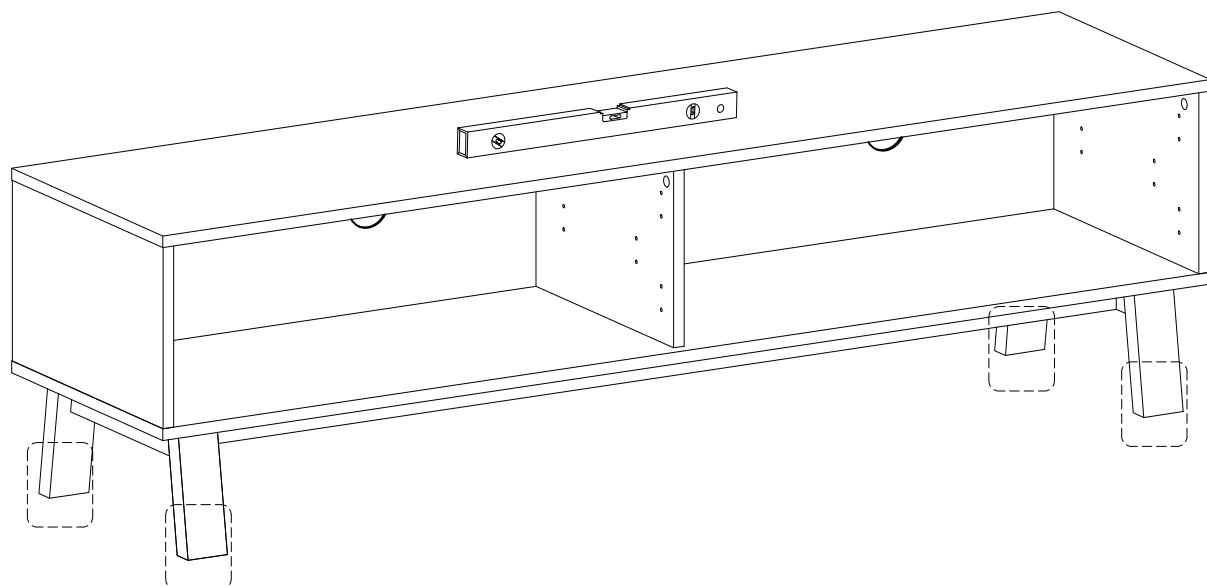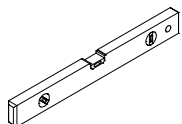






14

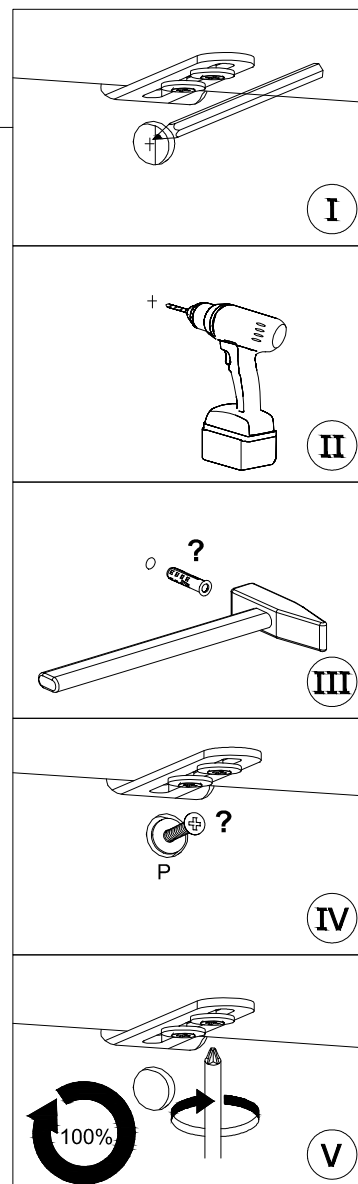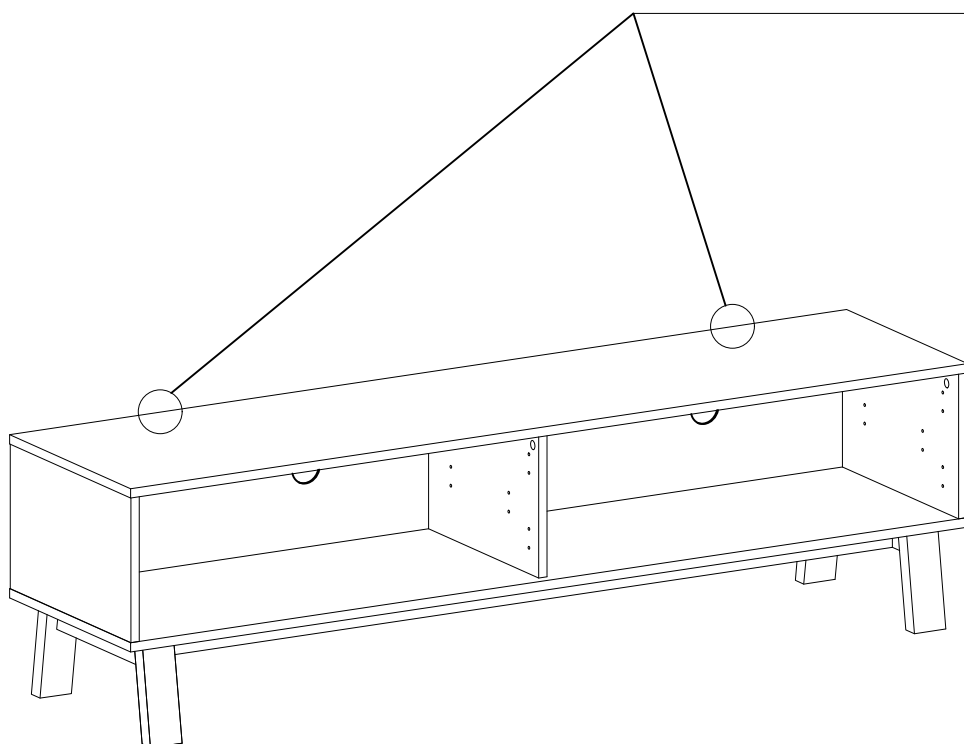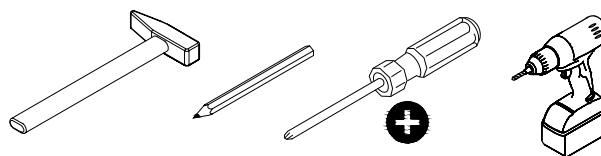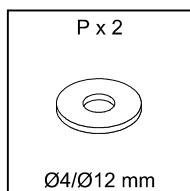



15

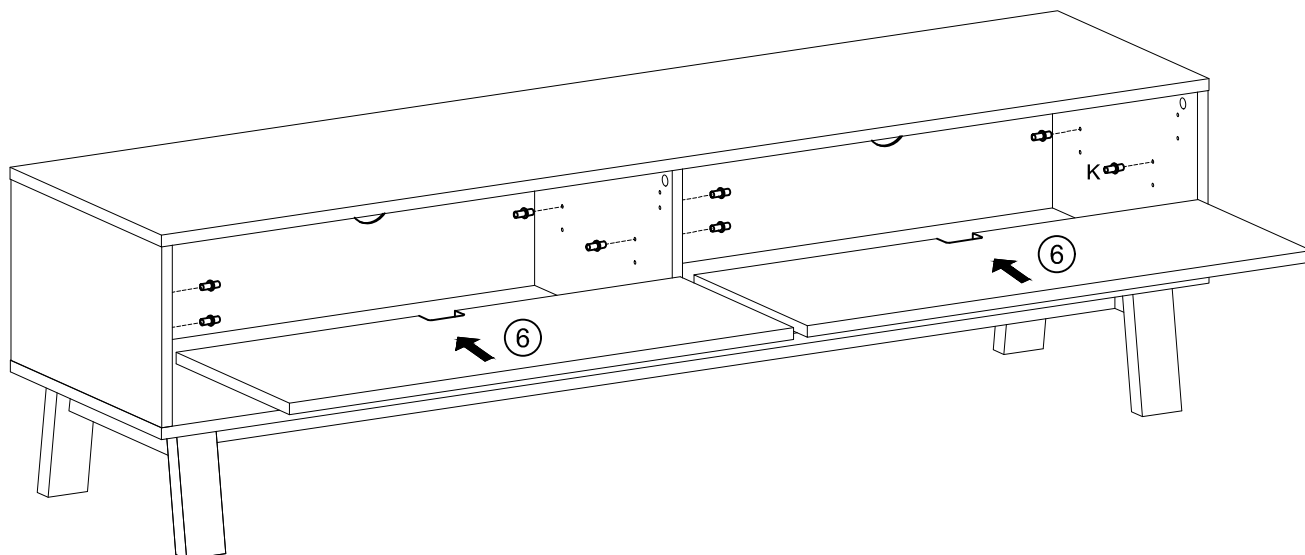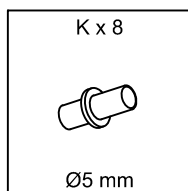





16

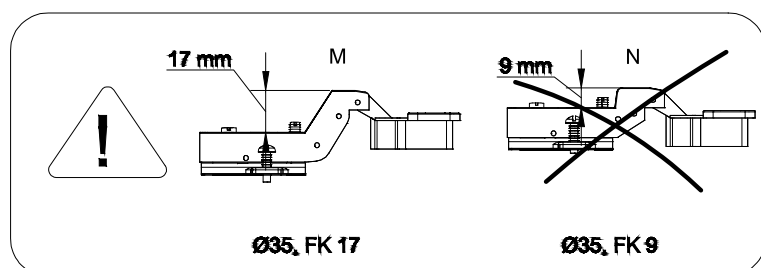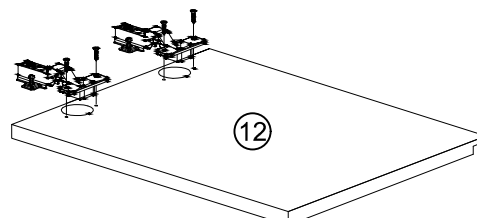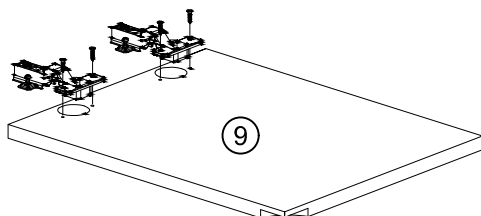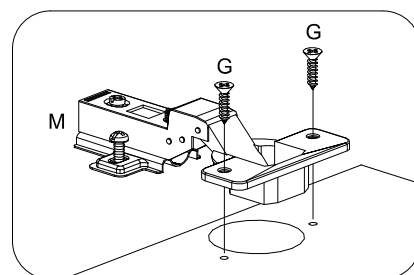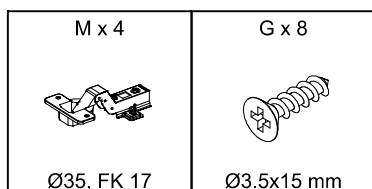



17

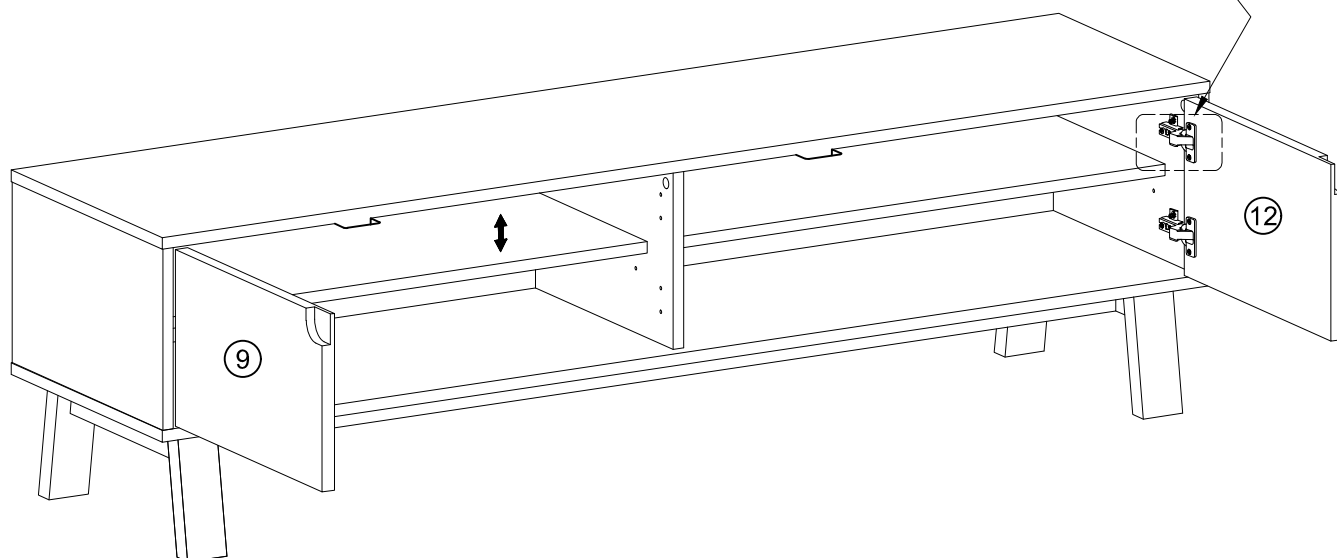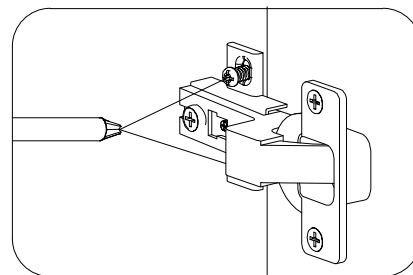


18

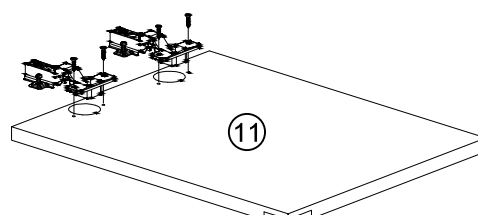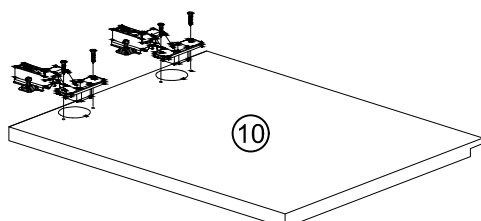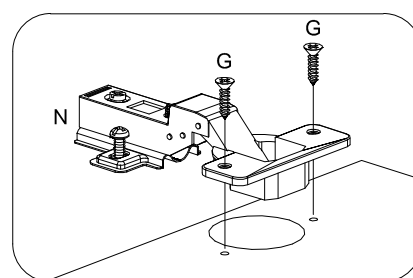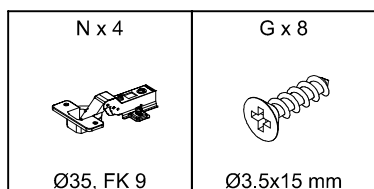


19

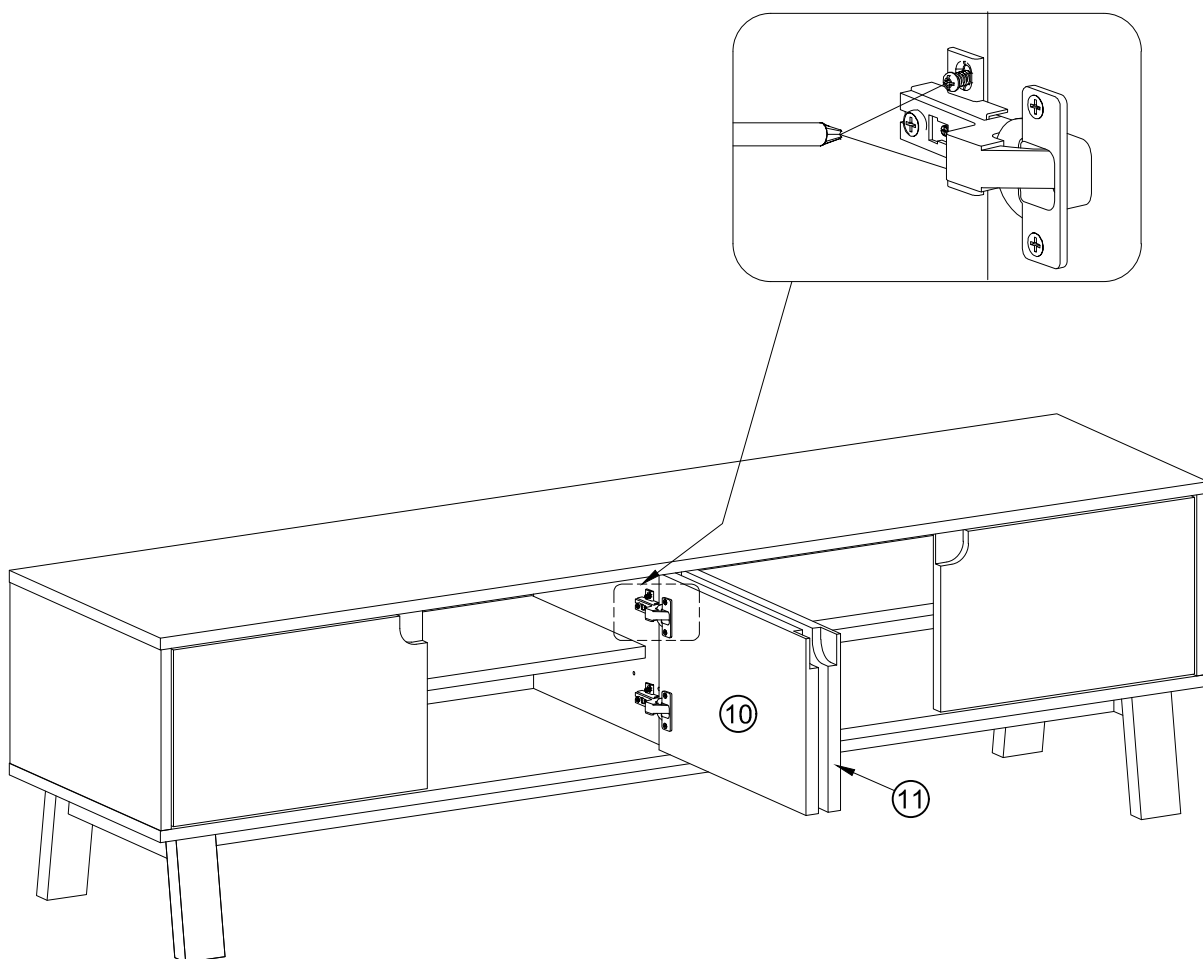


20


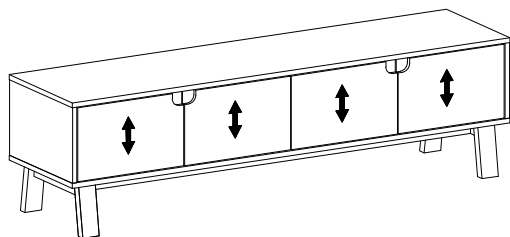
1.

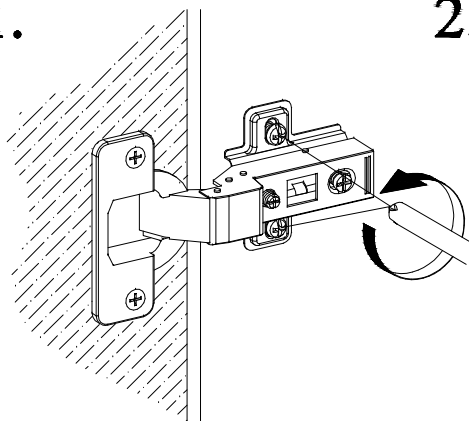


2.

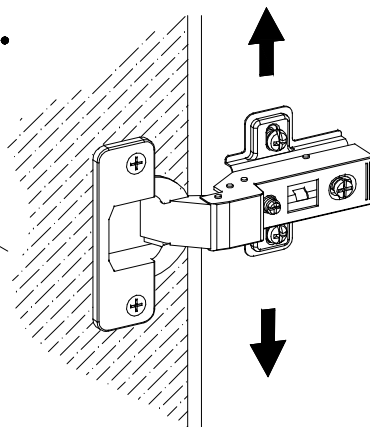


3.

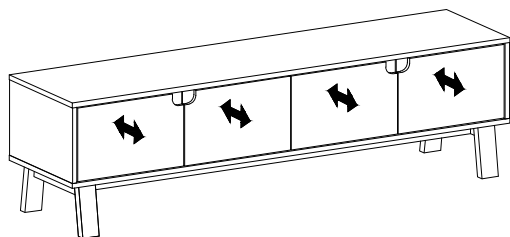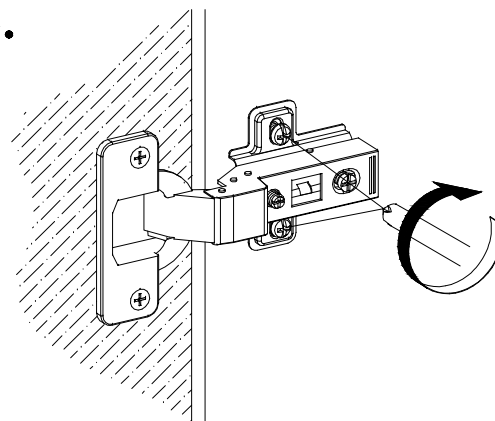



1.

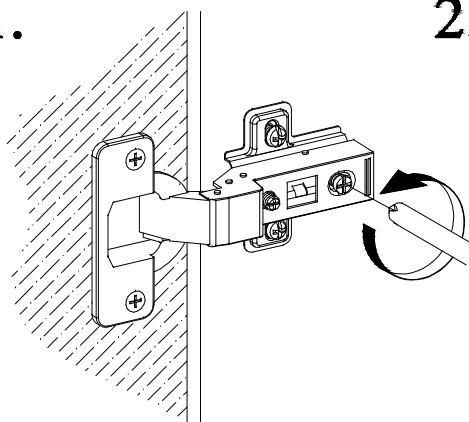


2.

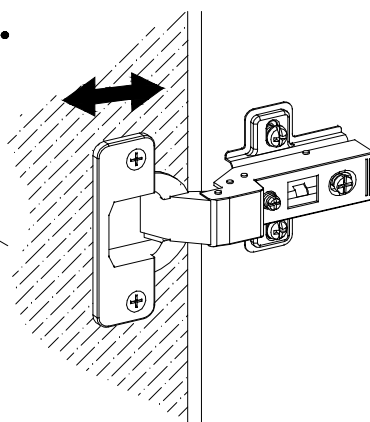


3.

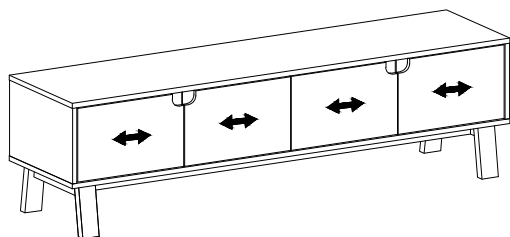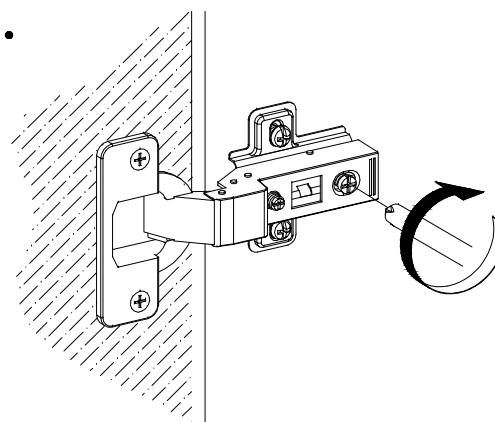

1.

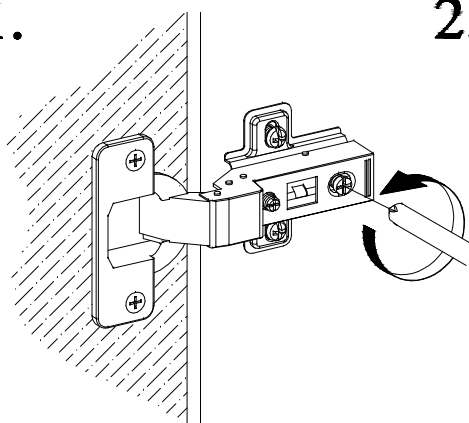

2.

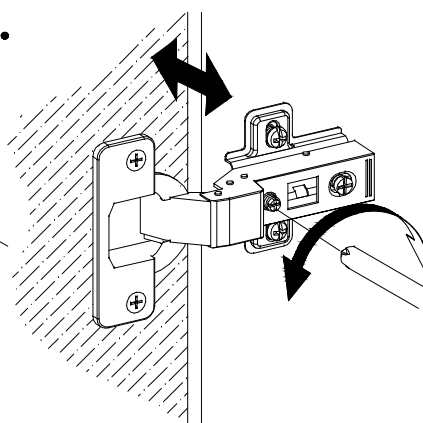

3.

