

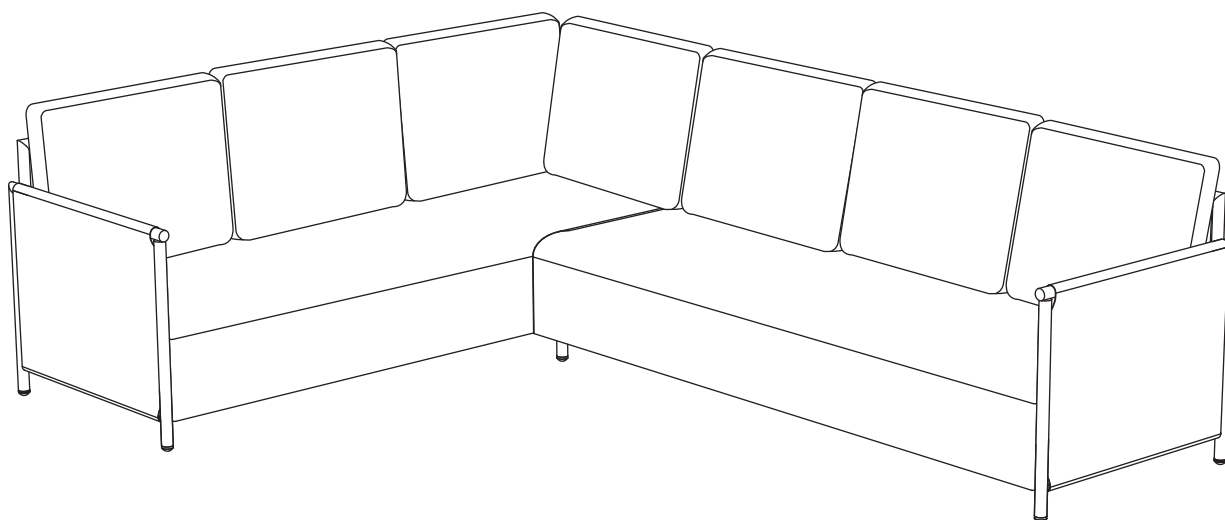



Assemble part in sofa ctn

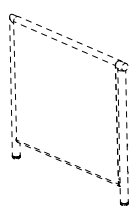


① x2

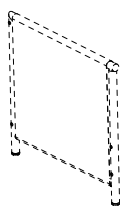


② x2

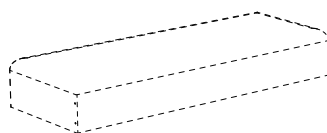

④ x2

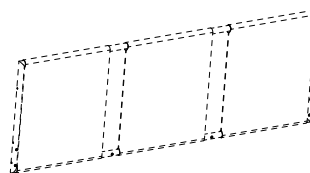


⑤ x2

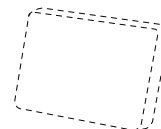

⑧ x6

Assemble parts in spare parts carton




③ x1




⑥ x2



⑦ x2

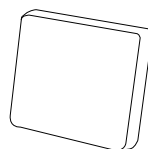

⑨ x1




M6x45
Ax32



M6x15
Bx6




Cx38

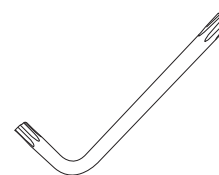


Dx2




1

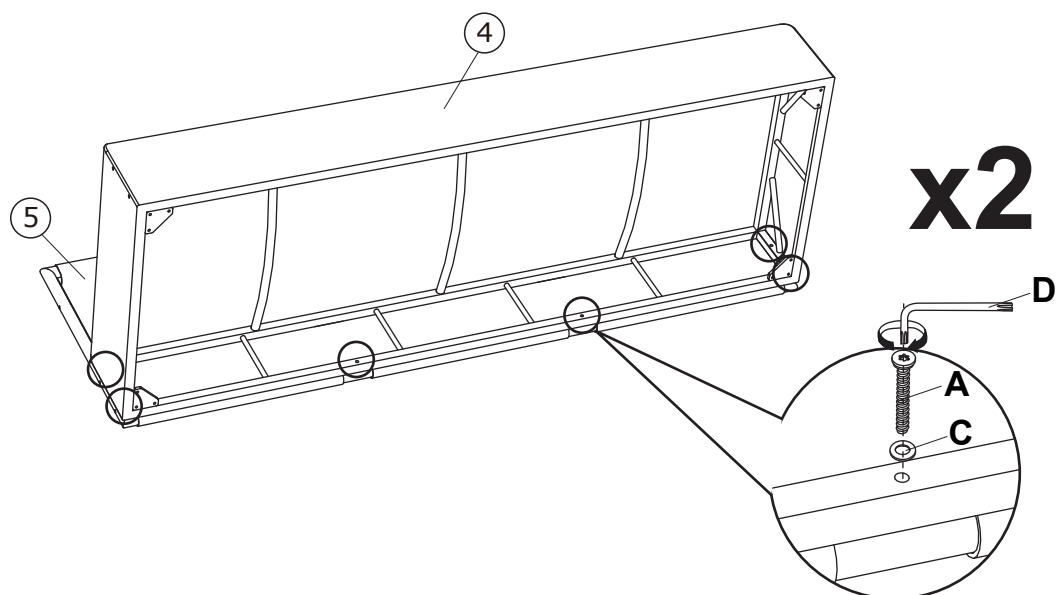


2

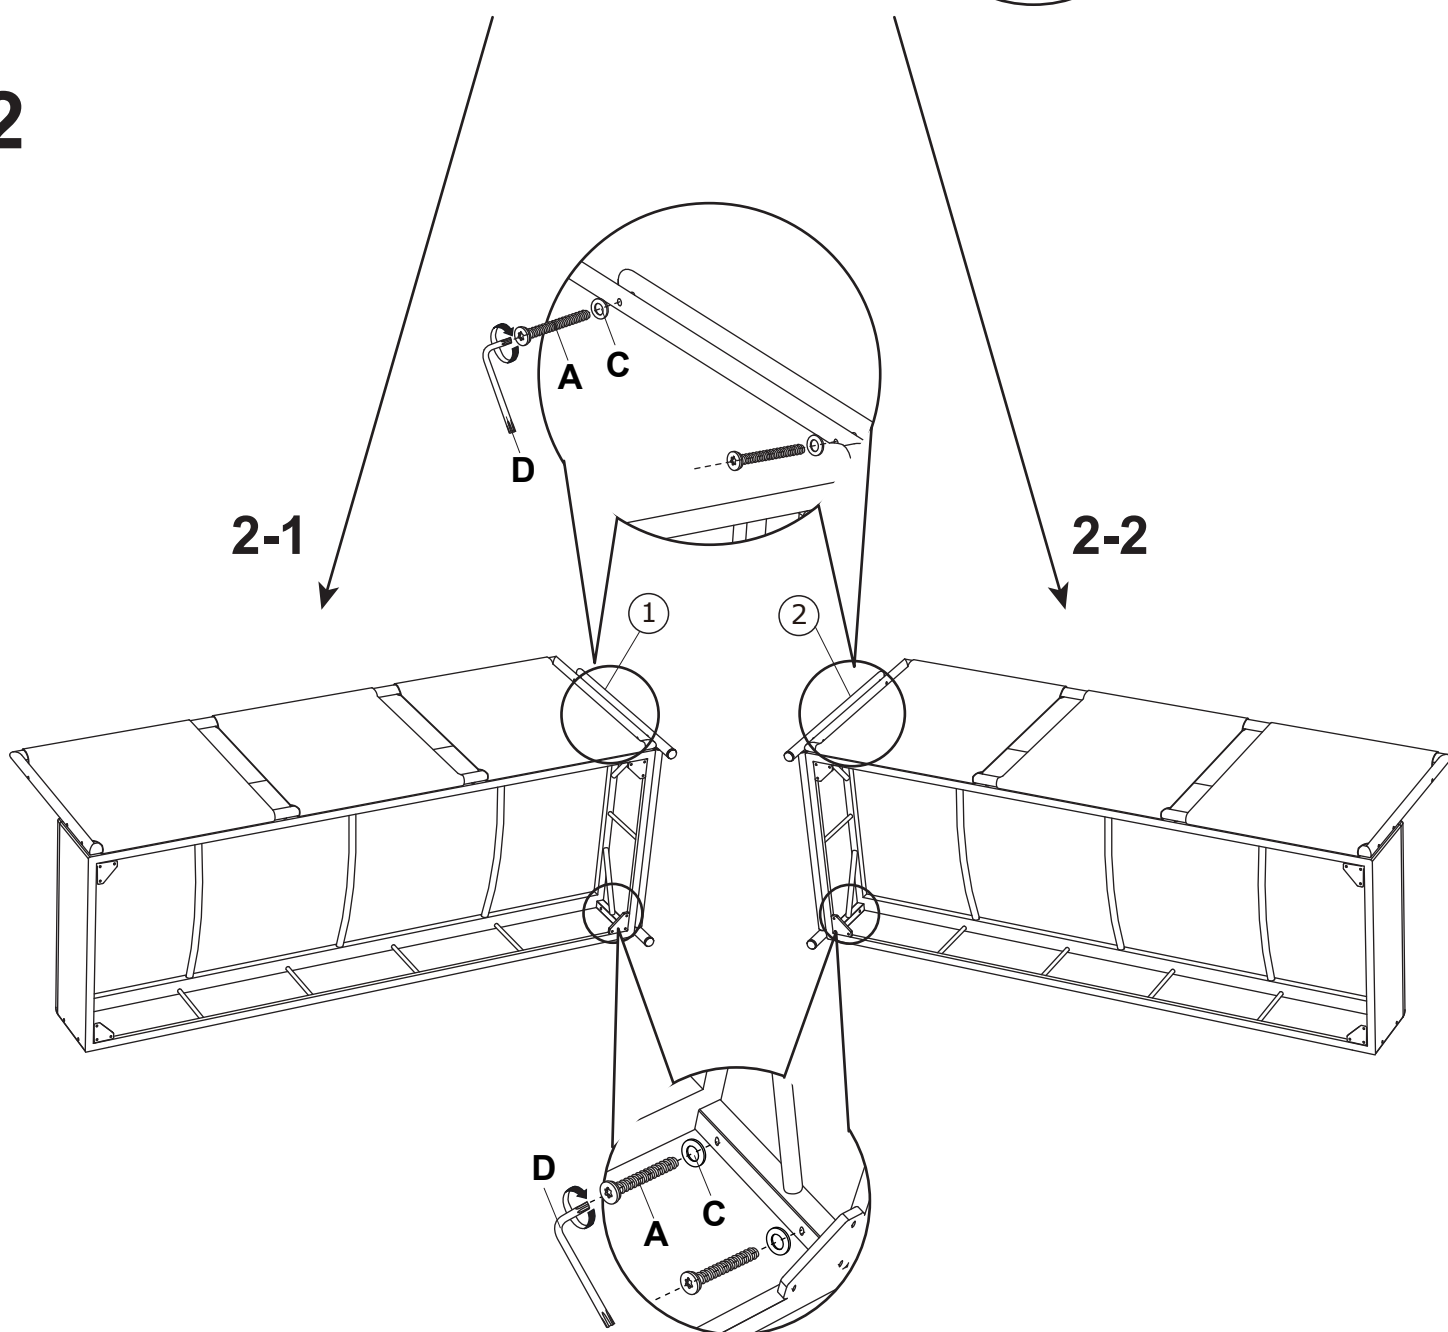


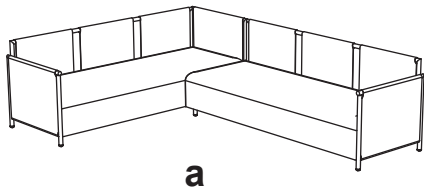


3

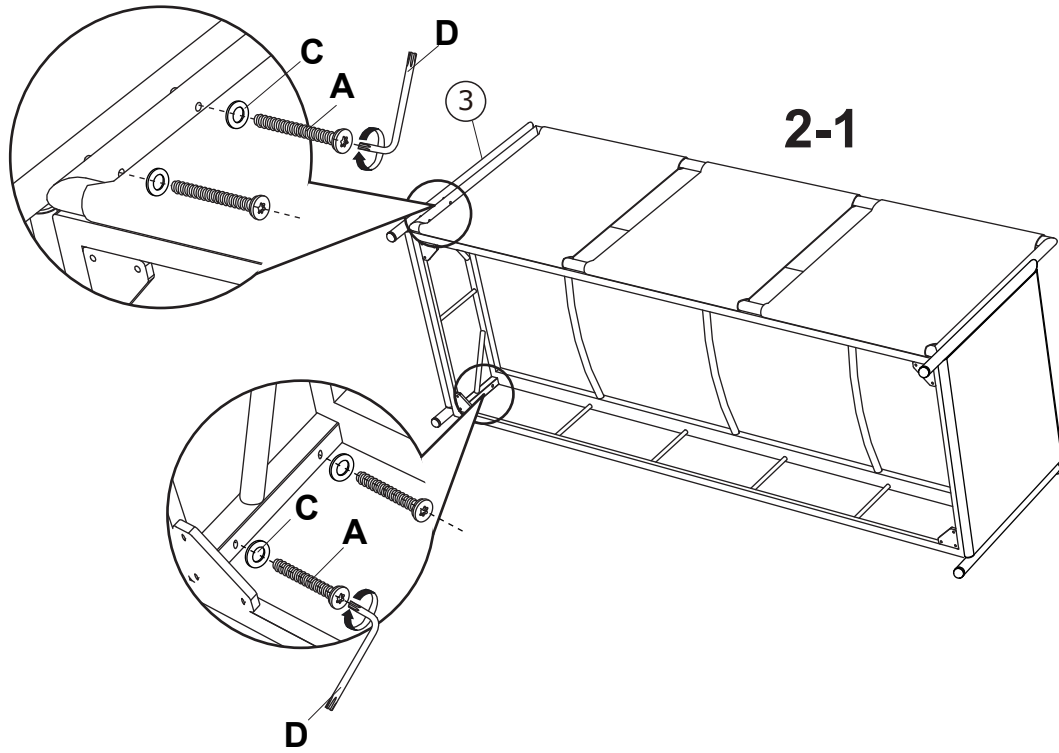


4

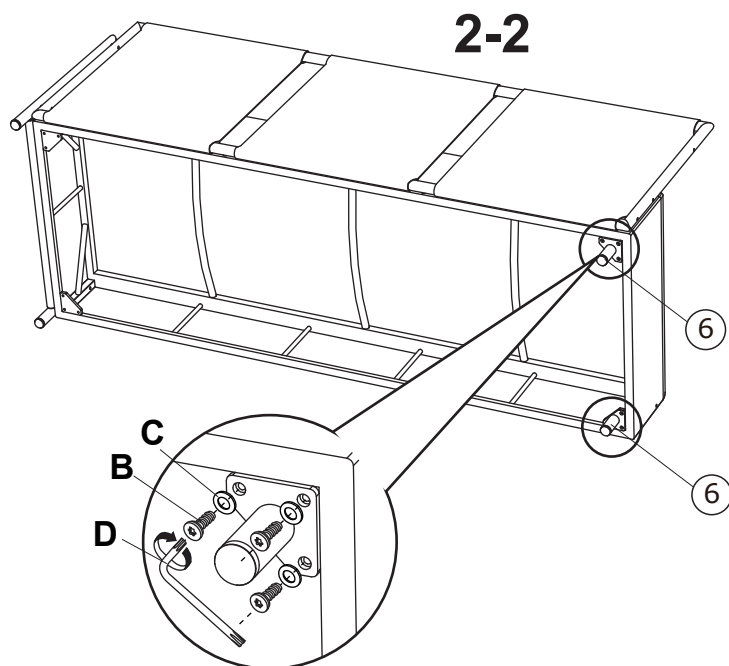


5

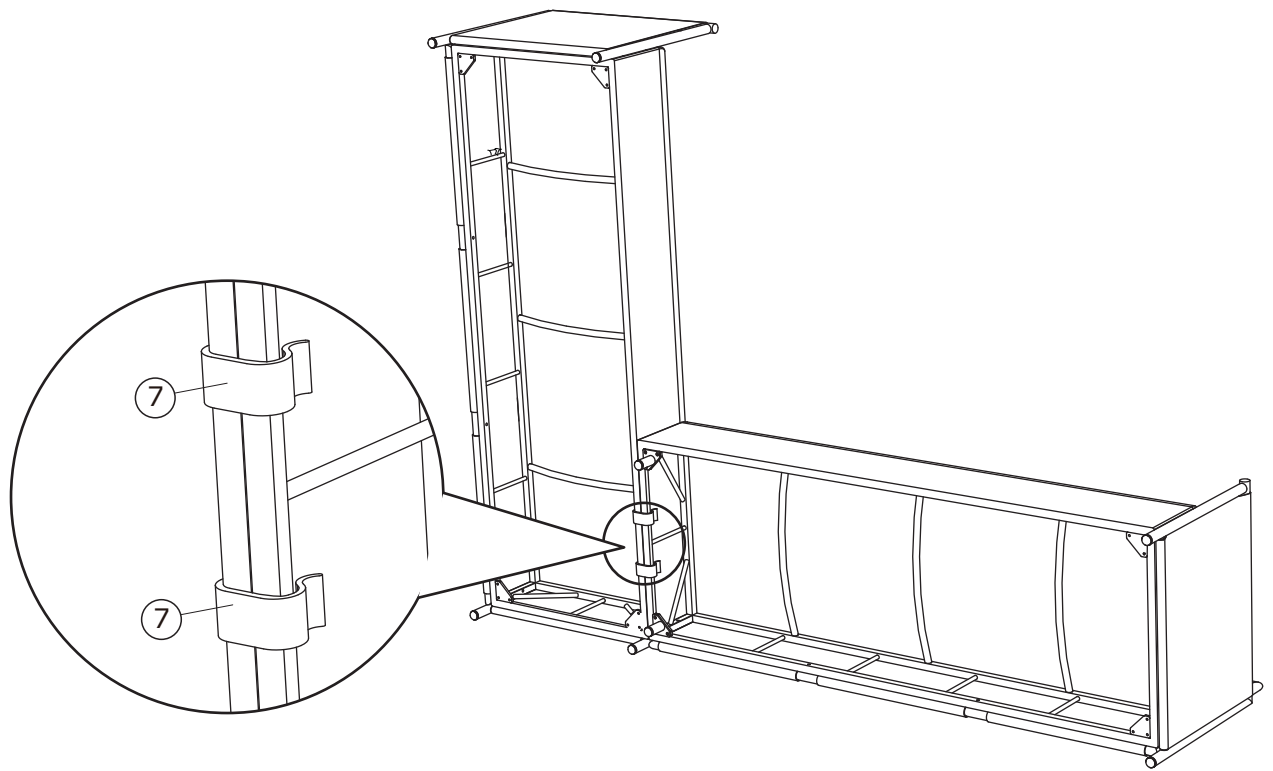


6

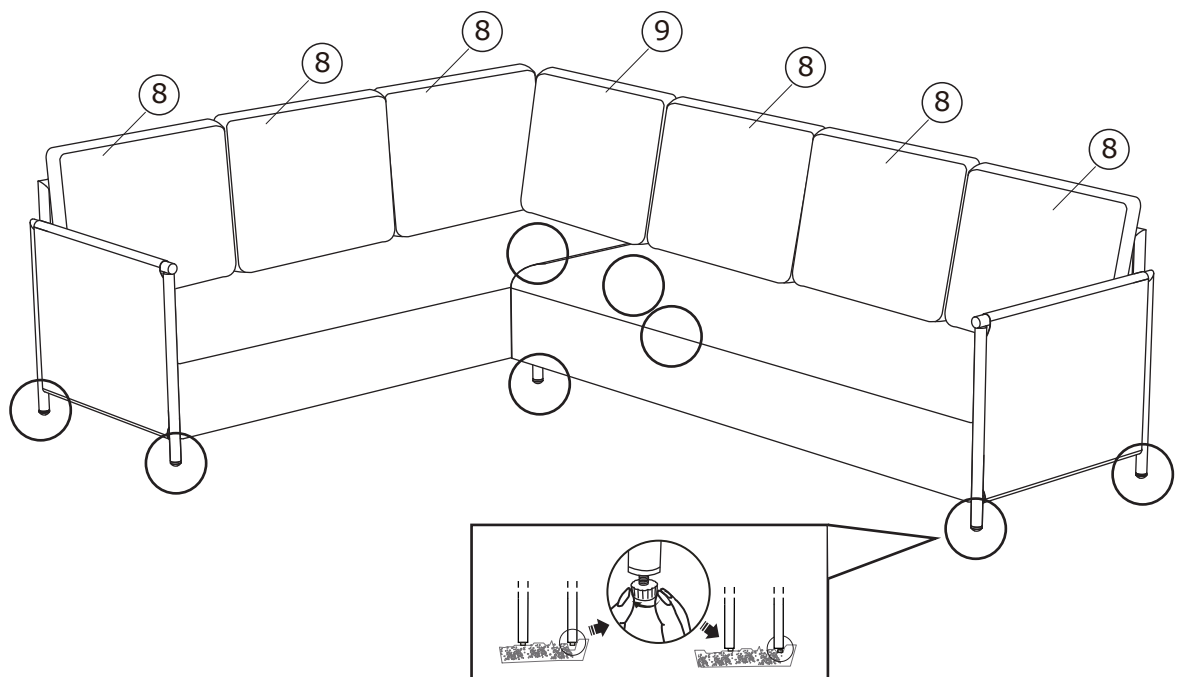


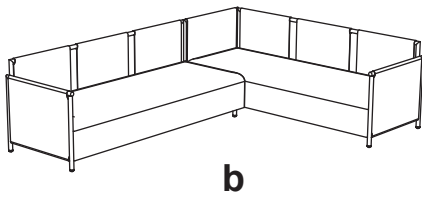


7

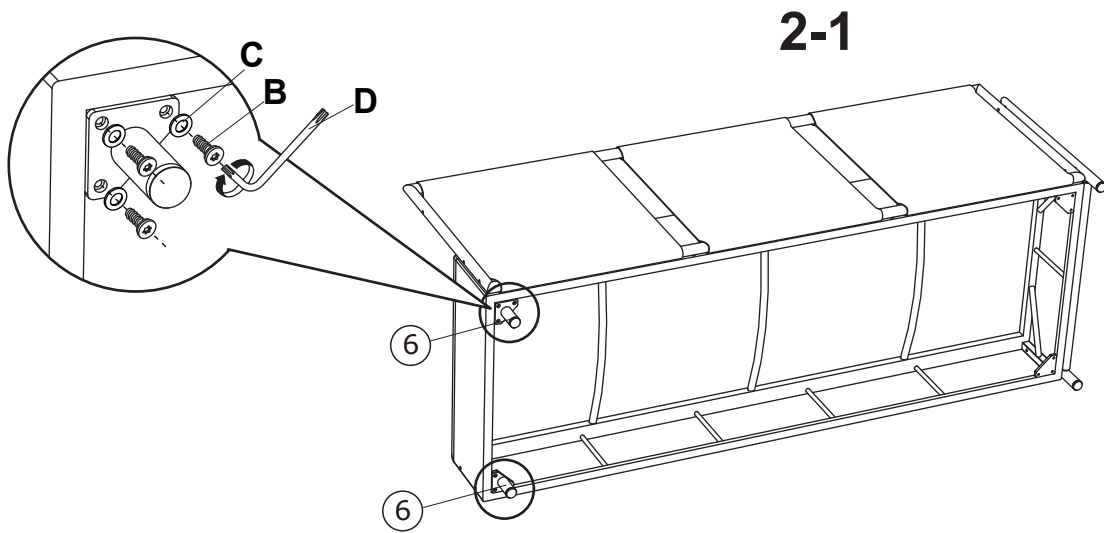


8

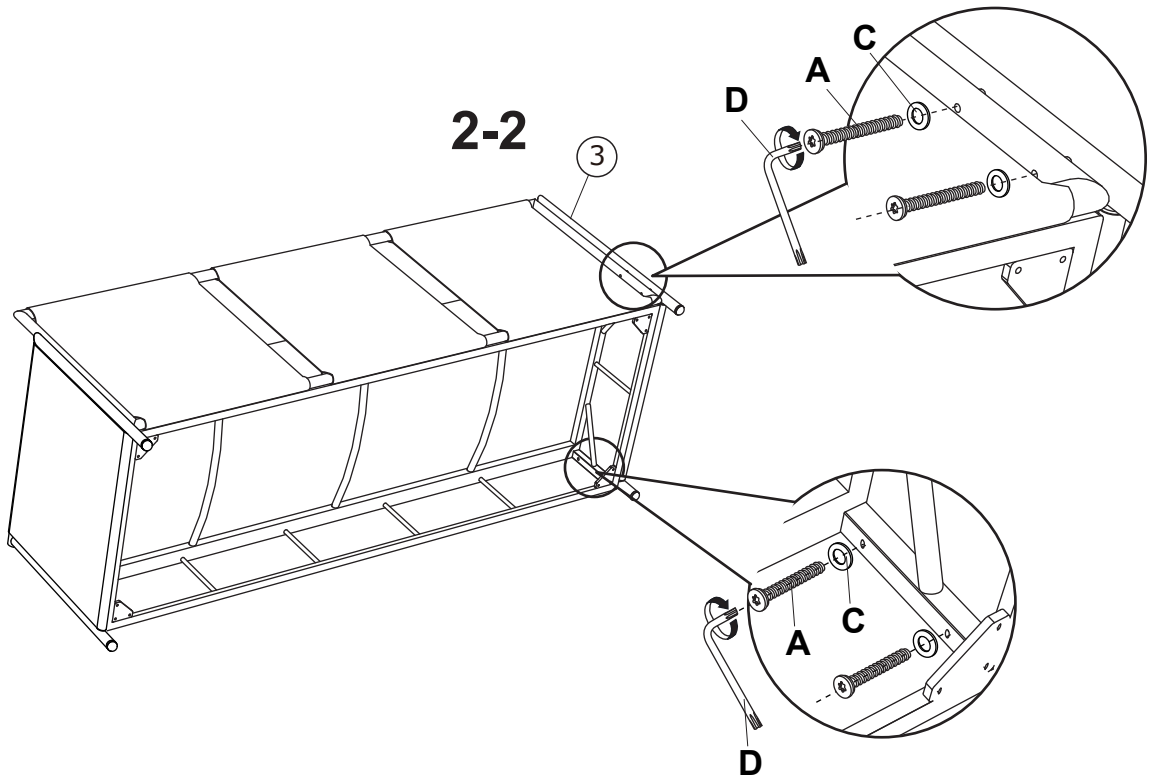


9

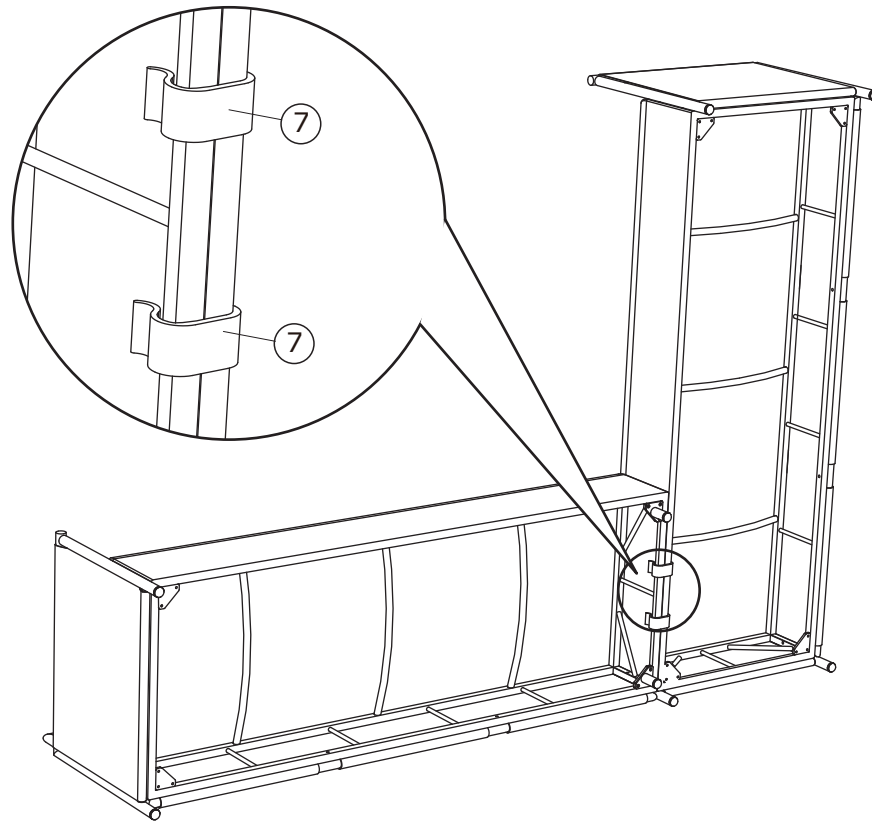


10

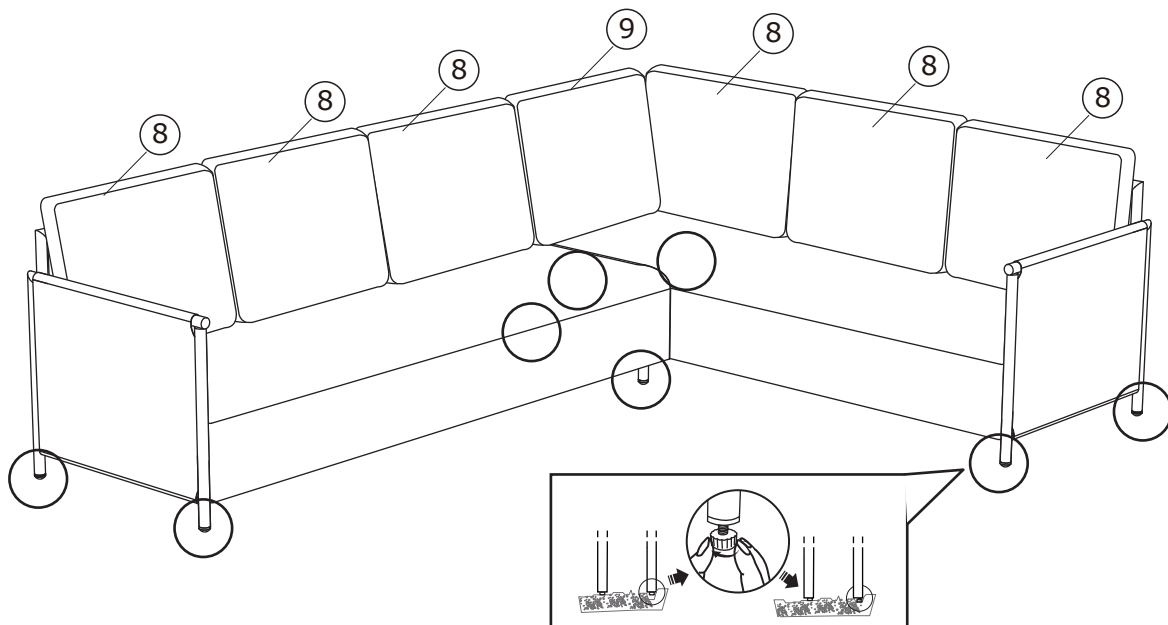


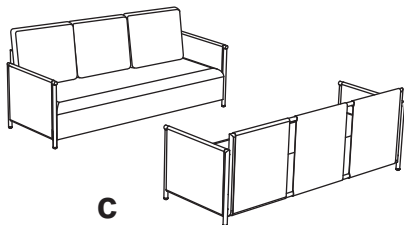


11

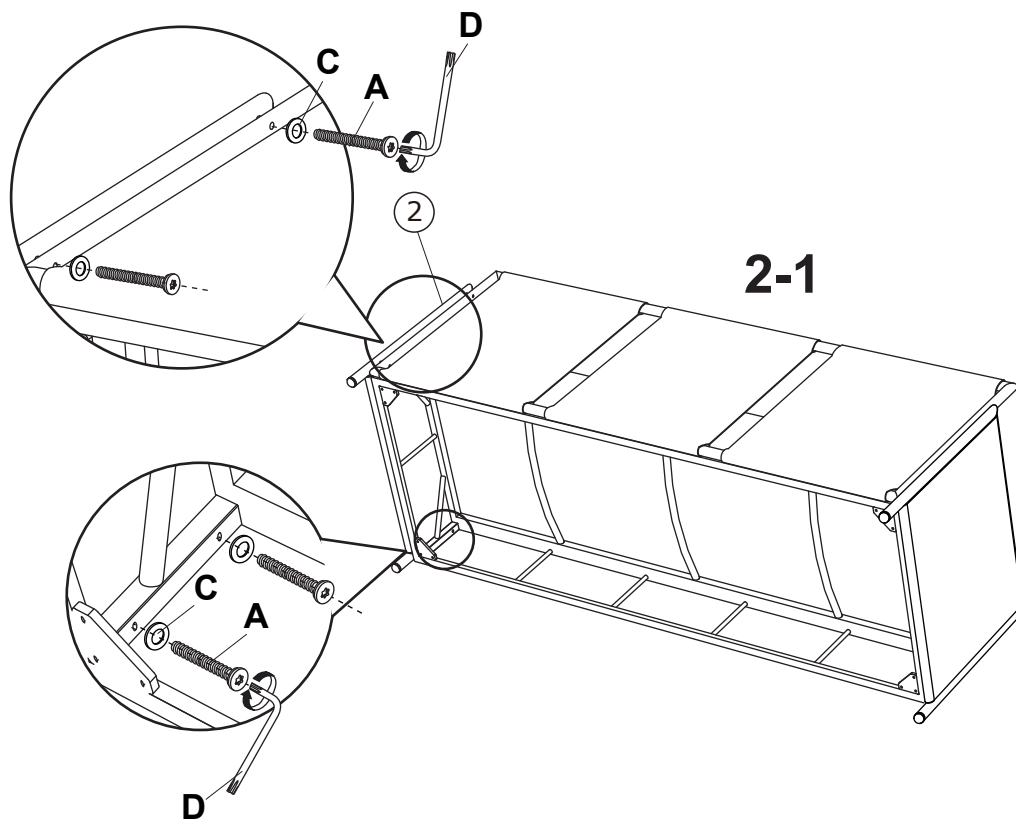

12

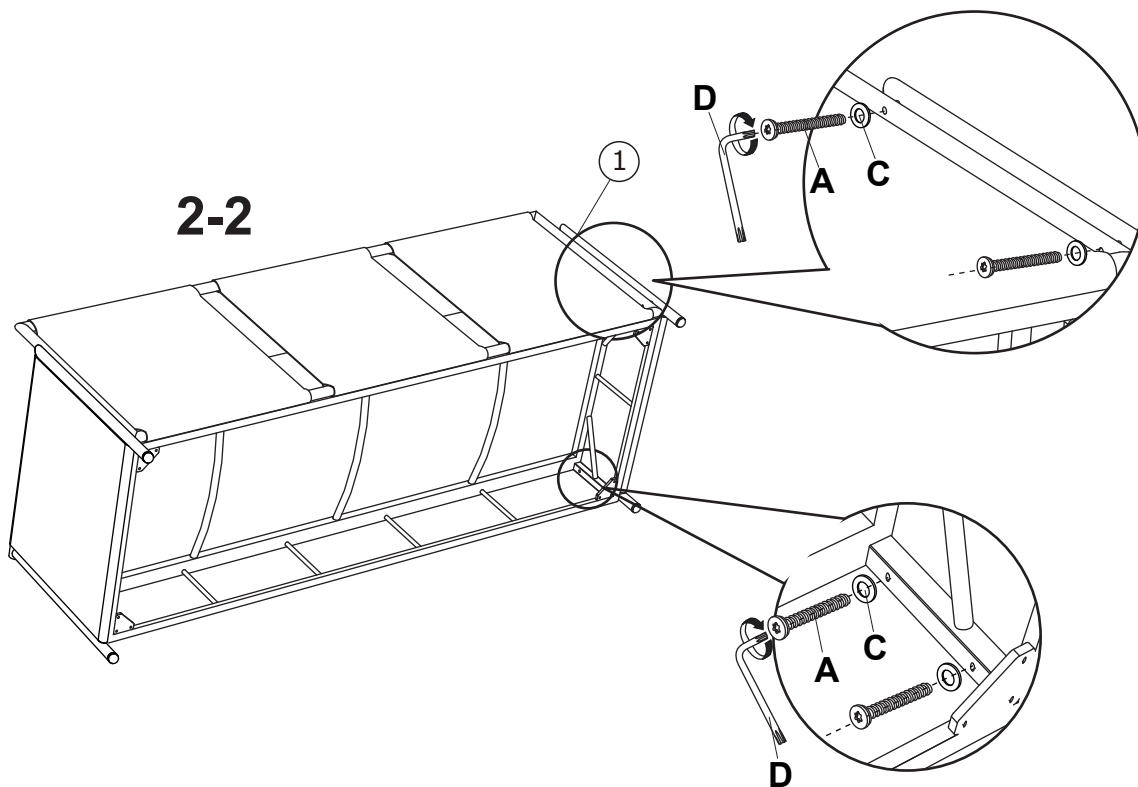

13

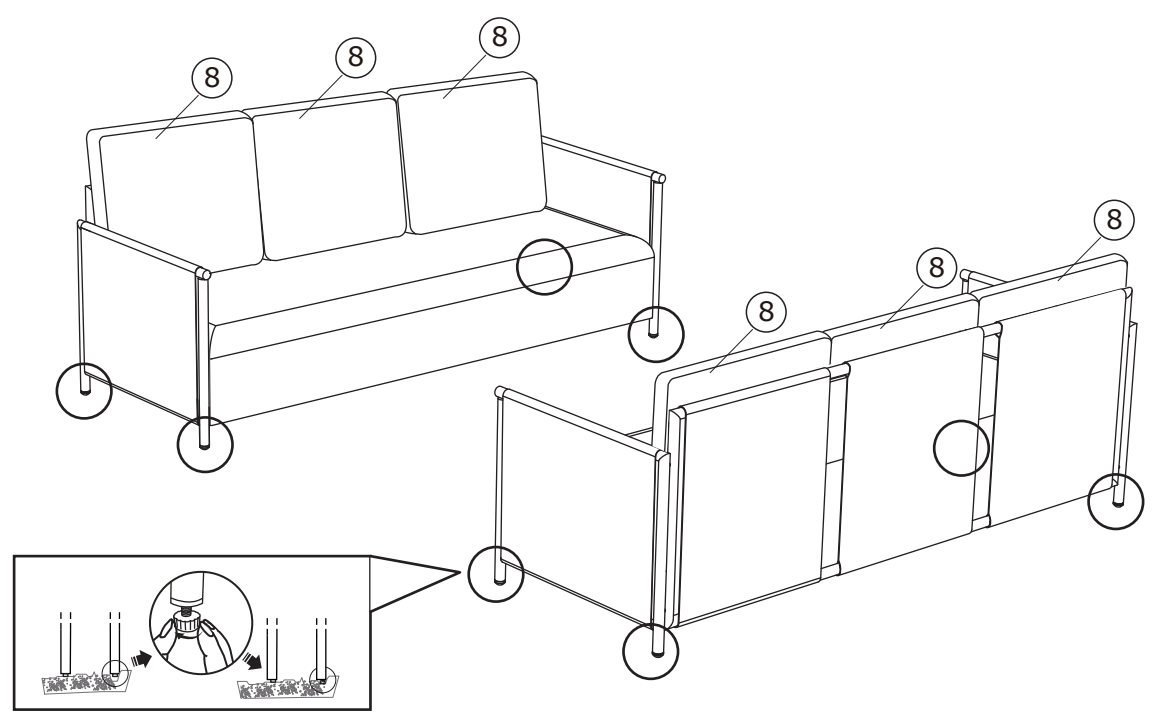

14

