


NOLA

Monteringsanvisning

12-05-2023
46252061 46254641 46252931

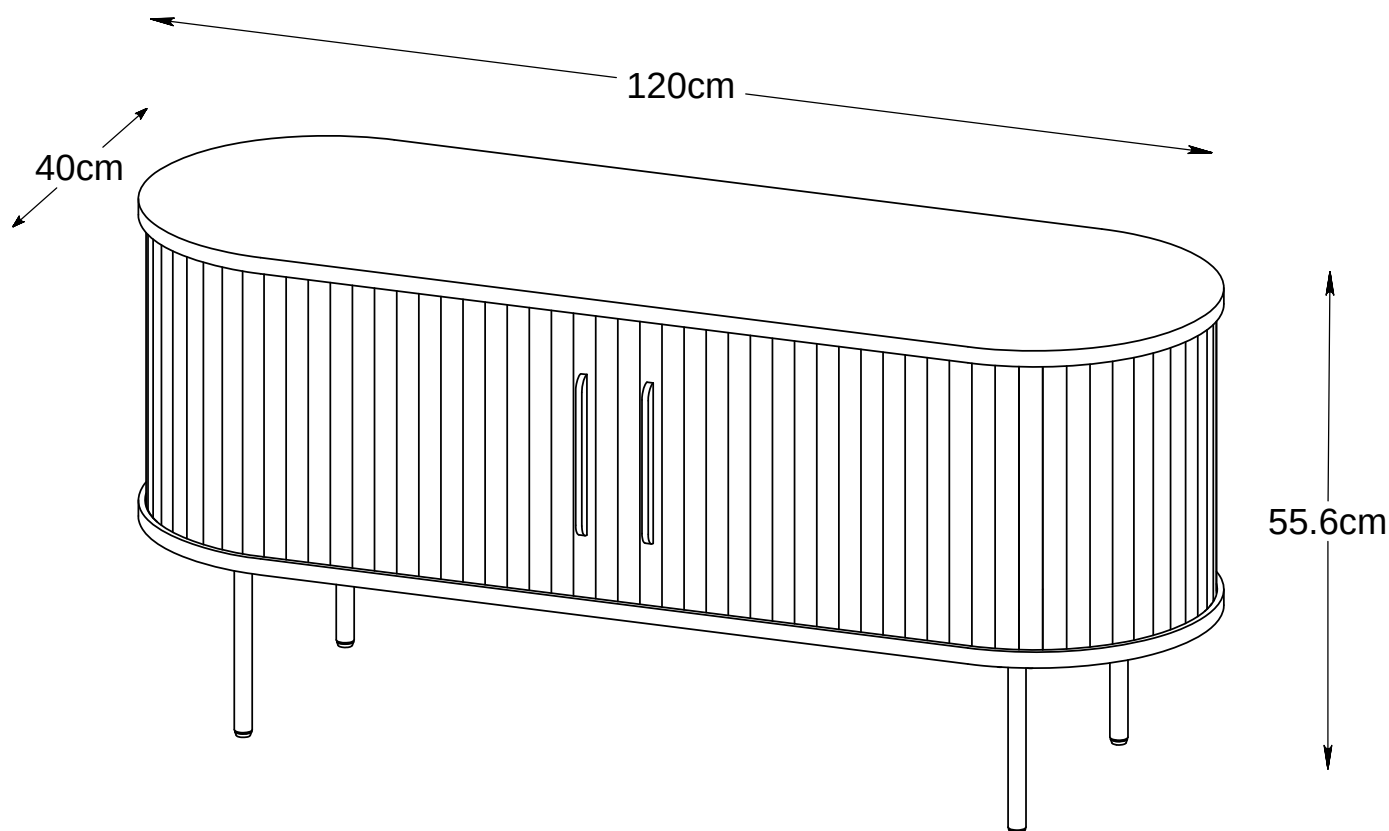

VIKTIG !

DET MÅ IKKE BRUKES ELEKTRISK SKRUTREKKER
VED MONTERING. HULLENE TIL SKRUENE ER I
SPON ELLER PLAST, OG KAN ØDELEGGES VED
BRUKT AV STOR KRAFT.

Bohus

46252061


Réf./No.	Réf./Art	Qty./Stck./Quantité	Size / Maß / Dimension (mm)	Qty./Stck./Quantité	✓
1	328716206	1	1200x400x18		
2	328717206	1	320x354x16		
3	328718206	1	320x354x16		
4	328719206	1	1200x400x18		
5	328720206	1	320x335x16		
6	328721206	2	381x310x16		
7	328722206	1	795x331x3		
8	228703	4	200x50x50		
9	328723206	2	1000x330x12		

46254641

Réf./No.	Réf./Art	Qty./Stck./Quantité	Size / Maß / Dimension (mm)	Qty./Stck./Quantité	✓
1	328716464	1	1200x400x18		
2	328717464	1	320x354x16		
3	328718464	1	320x354x16		
4	328719464	1	1200x400x18		
5	328720464	1	320x335x16		
6	328721464	2	381x310x16		
7	328722464	1	795x331x3		
8	228703	4	200x50x50		
9	328723464	2	1000x330x12		









46252931



Réf./No.	Réf./Art	Qty./Stck./Quantité	Size / Maß / Dimension (mm)	Qty./Stck./Quantité	✓
1	328716293	1	1200x400x18		
2	328717293	1	320x354x16		
3	328718293	1	320x354x16		
4	328719293	1	1200x400x18		
5	328720293	1	320x335x16		
6	328721293	2	381x310x16		
7	328722293	1	795x331x3		
8	228703	4	200x50x50		
9	328723293	2	1000x330x12		

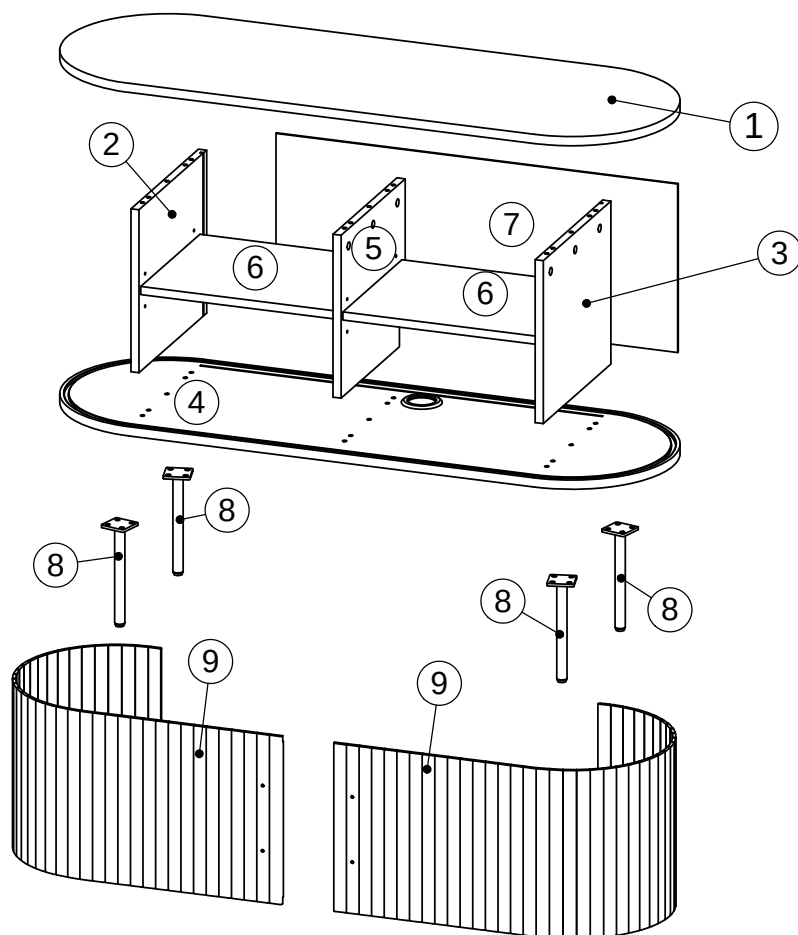


Réf./No.	Réf./Art.	Qty./Stck./Quantité	✓
A	228724	12	
B	228724	9	
C	228724	9	
D	228724	16	
E	228724	9	
F	228724	1	
G	228705	2	
H	228705	4	

Réf./No.	Réf./Art.	Qty./Stck./Quantité	✓
J	228724	8	
K	228724	8	
N	228724	8	

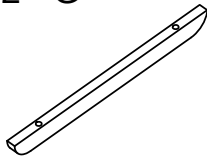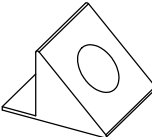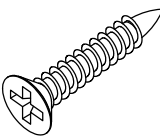
12 - A  Ø 8x30mm	9 - B  Ø 10x43.5mm	9 - C  Ø 15x11mm	16 - D  M6x16mm	9 - E  Ø 7x50mm	1 - F  4mm
2 - G  180x15x7mm	4 - H  M4x16mm	8 - J 	8 - K  Ø 3x18mm	8 - N  Ø 5x16mm	

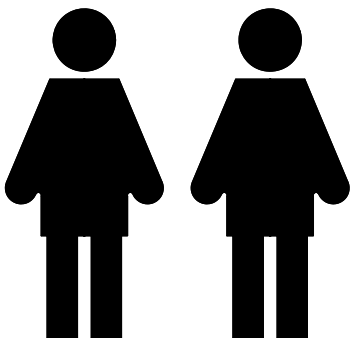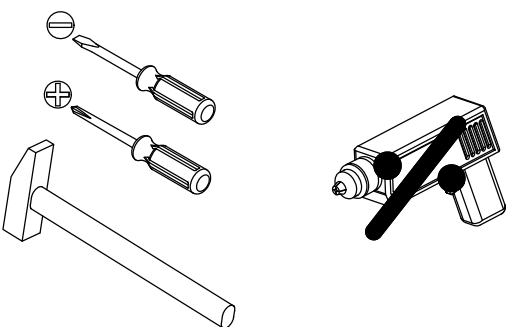

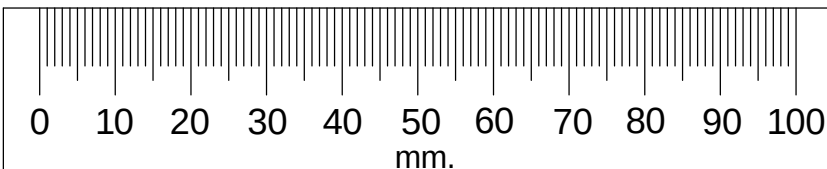
1

12 - A

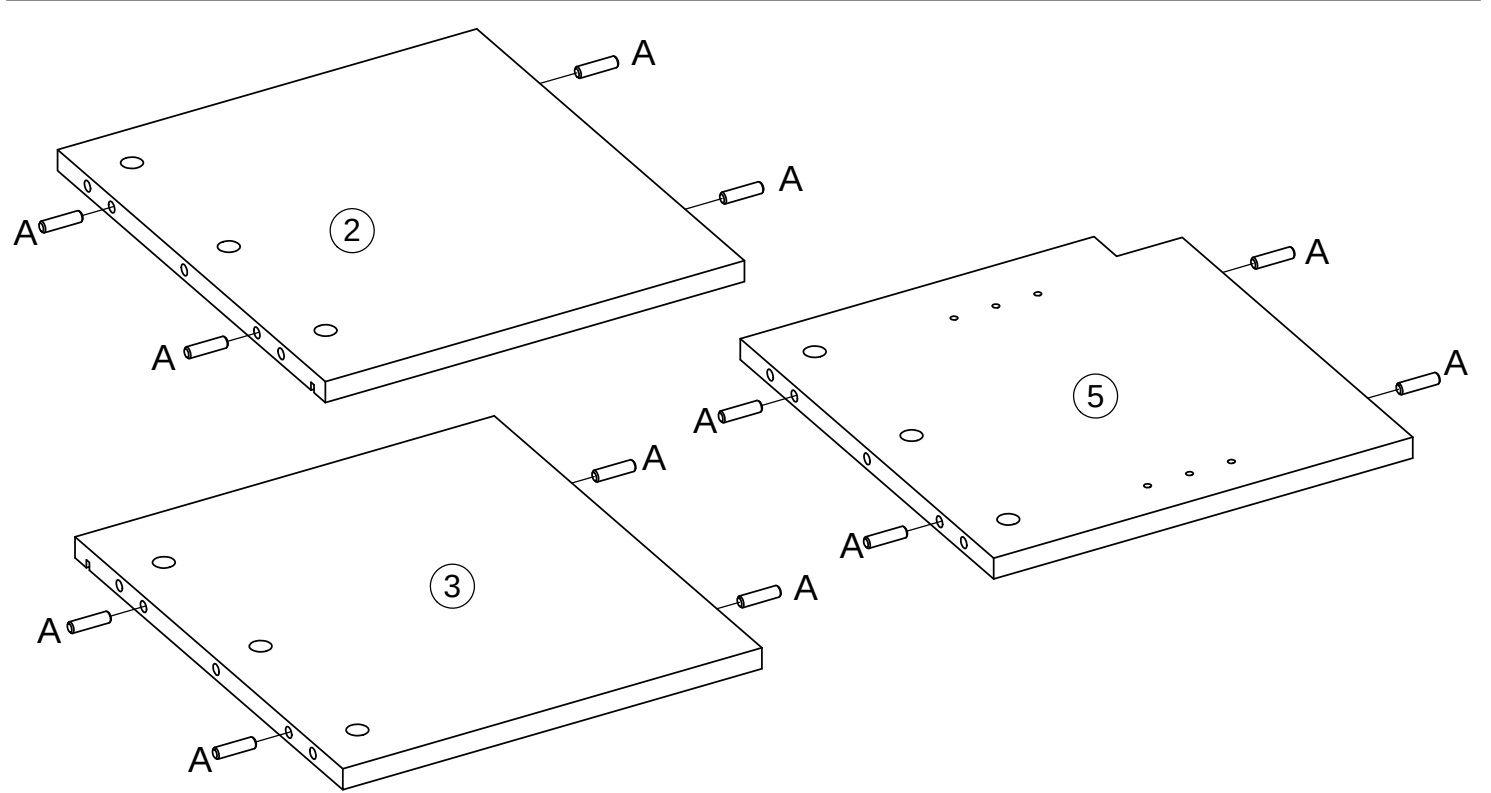

2


9 - B

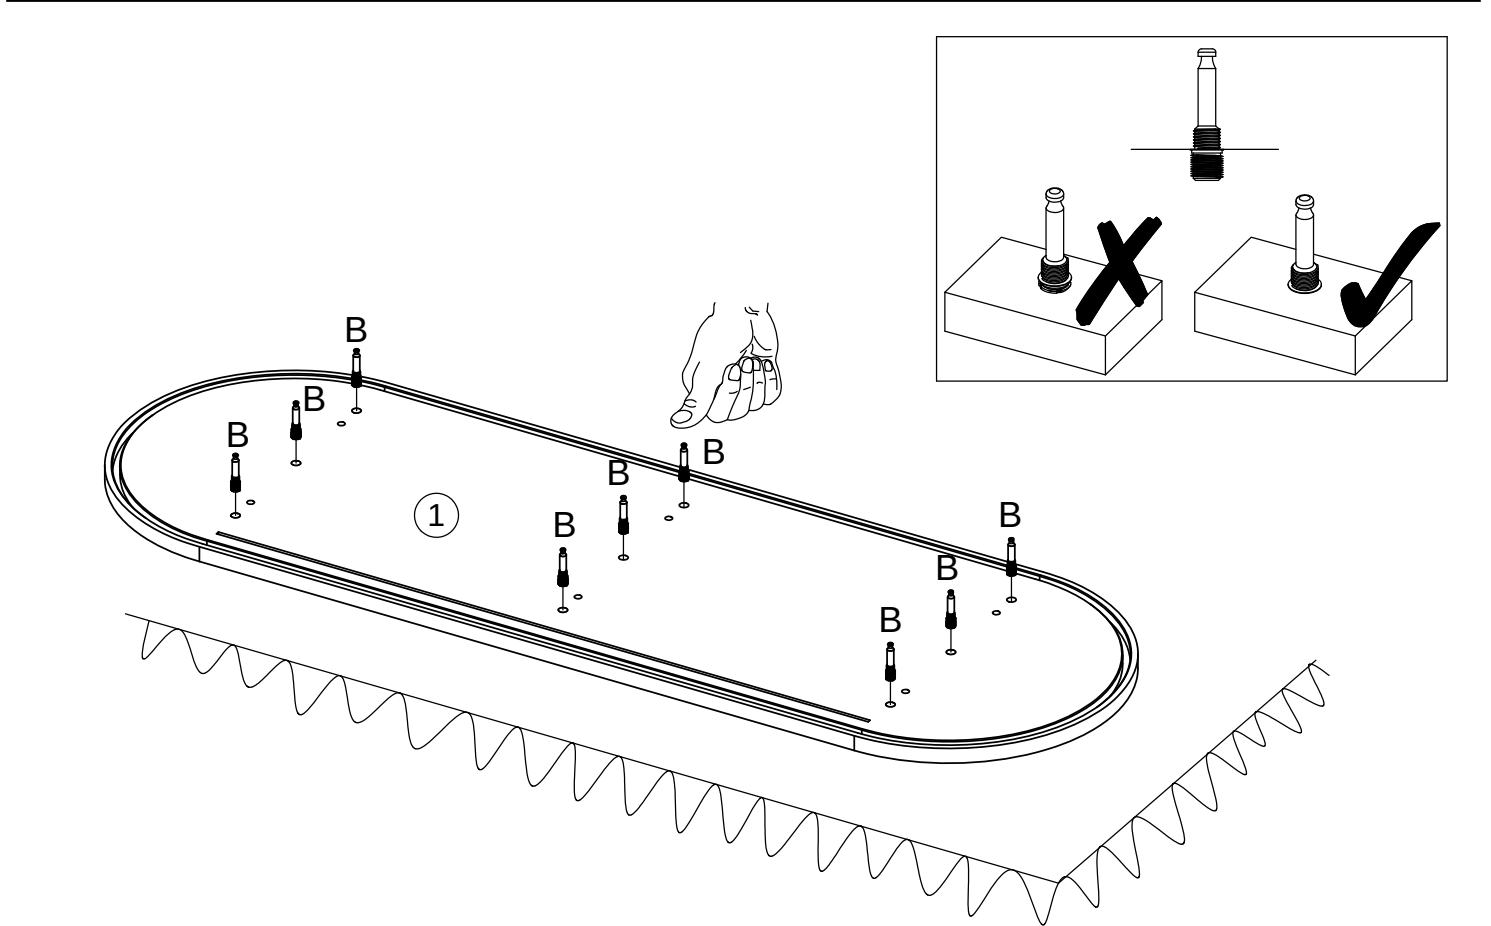

3

9 - C





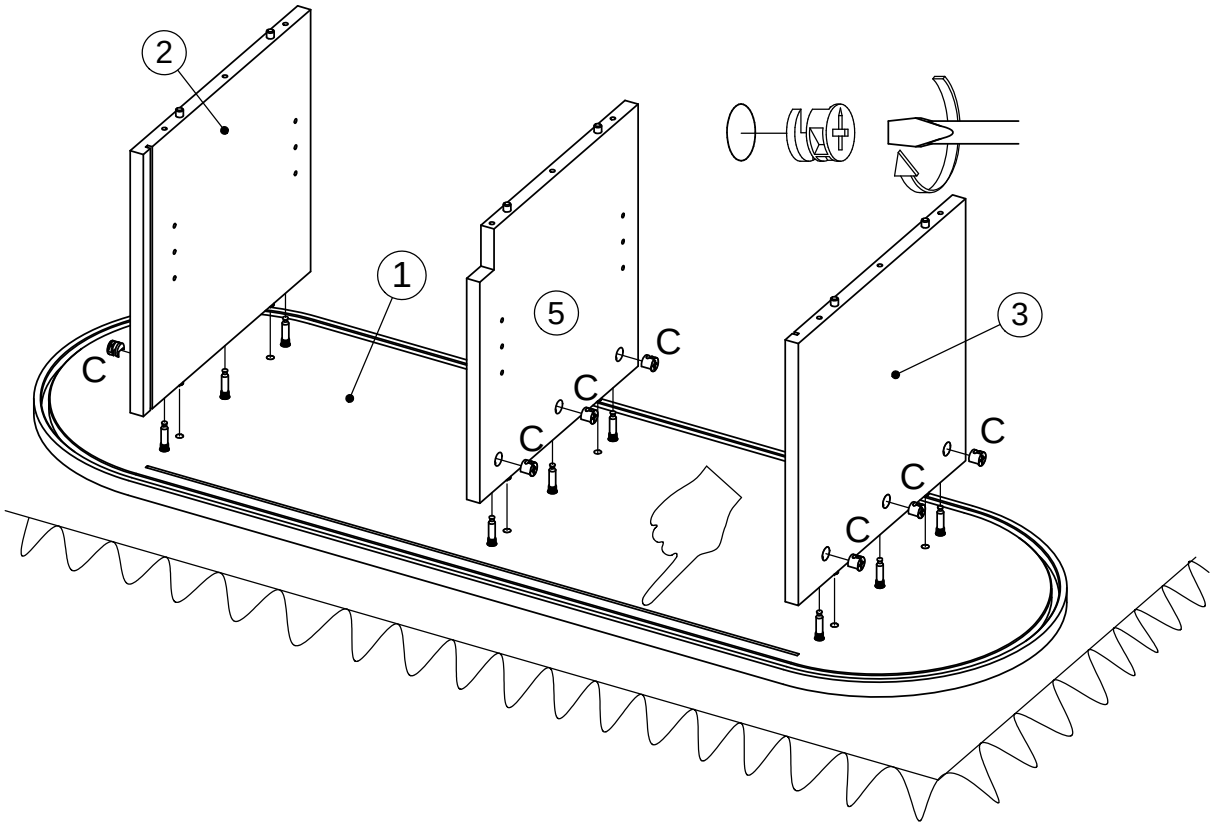
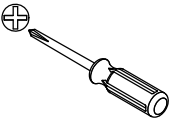


Diagram illustrating the assembly of three vertical panels (2, 5, 3) onto a base (1) using screws (C) and washers. The panels are shown being attached to the base, which is mounted on a wavy surface. A hand icon indicates the direction of assembly. An inset shows a close-up of a screw being inserted through a washer into a panel.

4



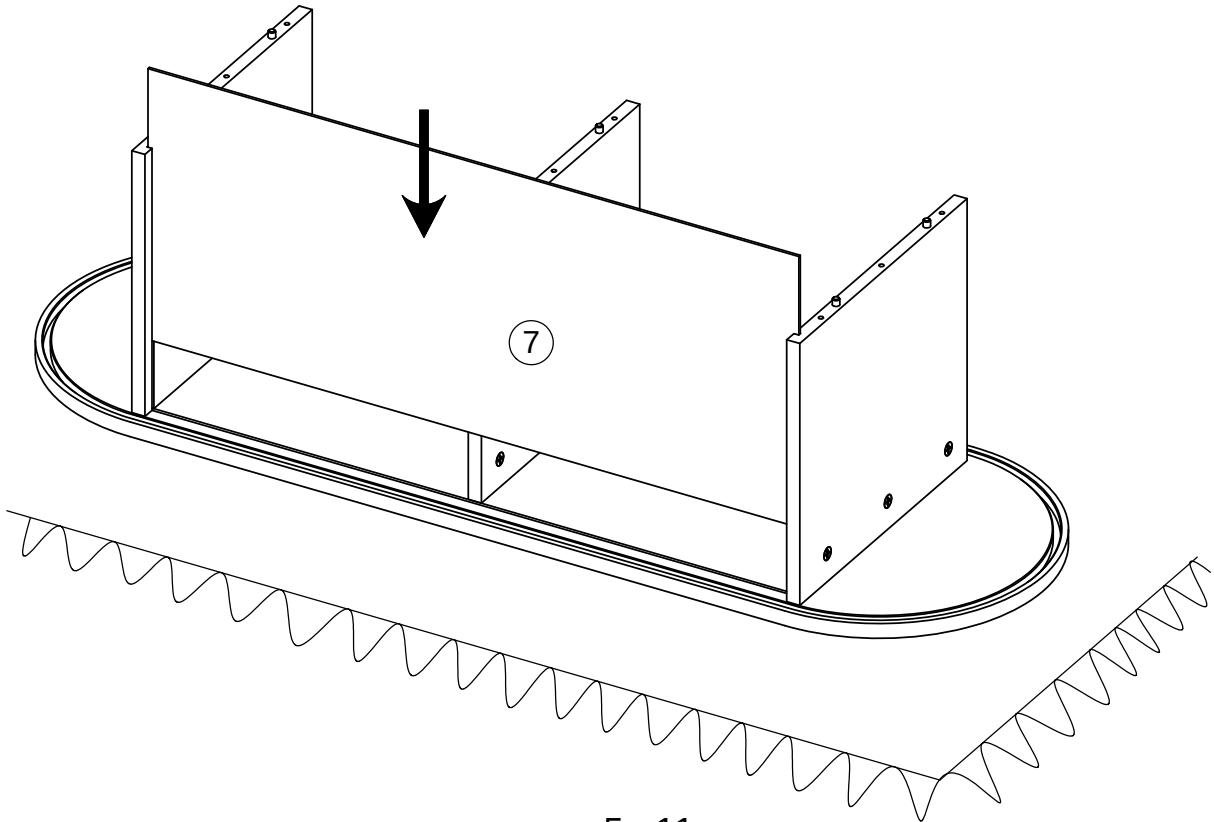



Diagram illustrating the final assembly of the unit, showing the large arrow indicating the direction of movement.

5 - 11

5

9 - E


1 - F

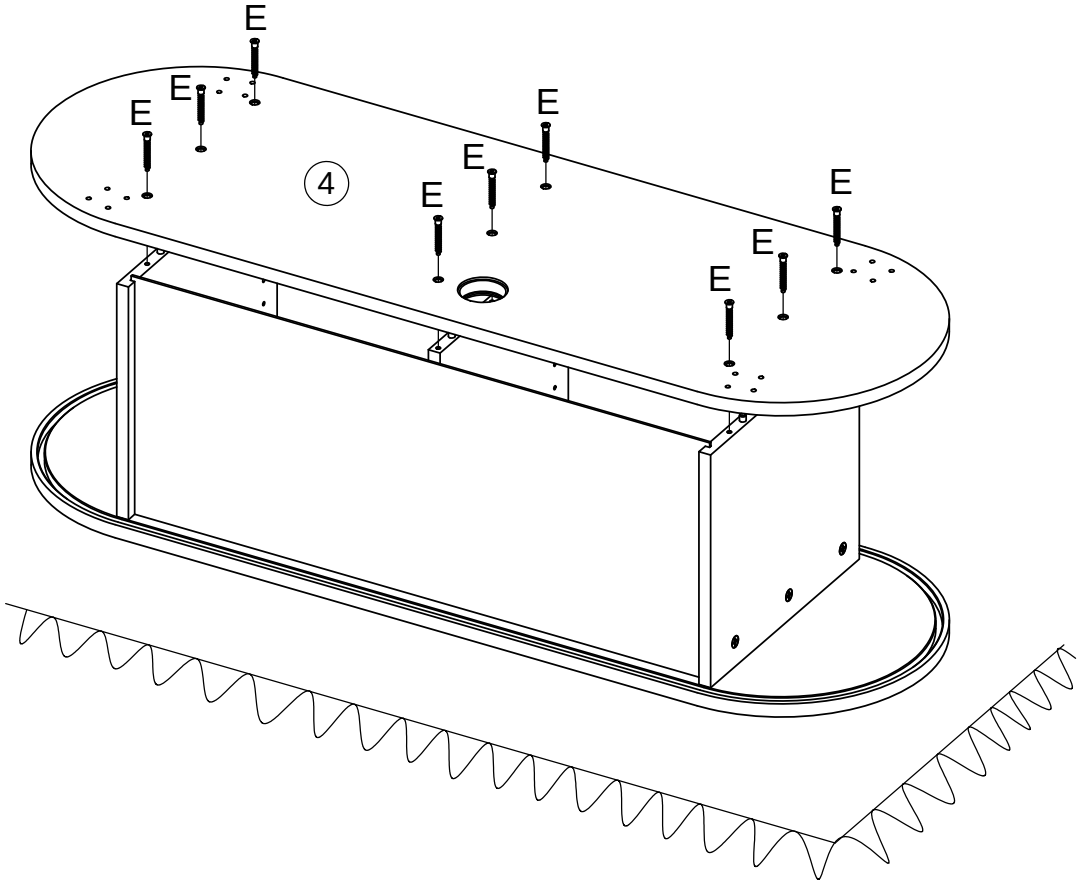

6


8 - J

8 - K

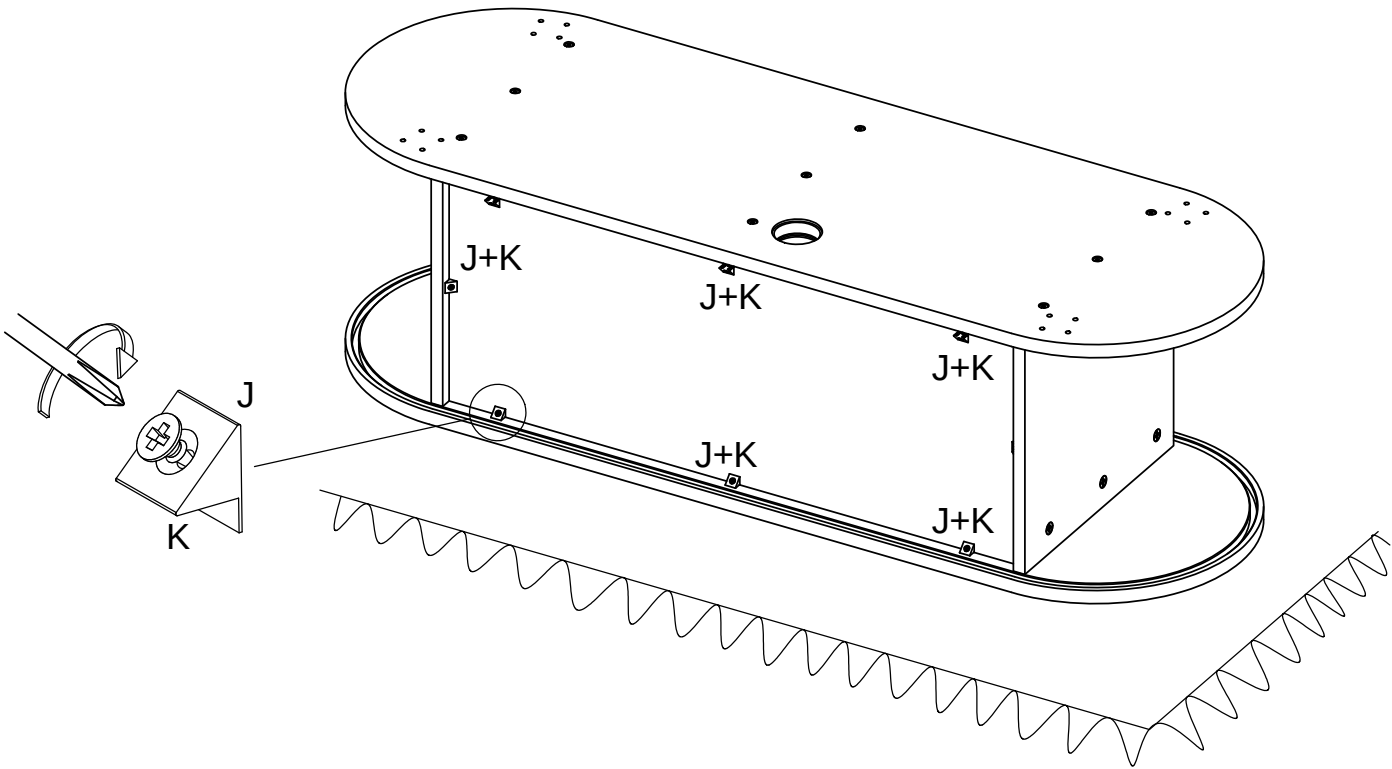


7

16 - D

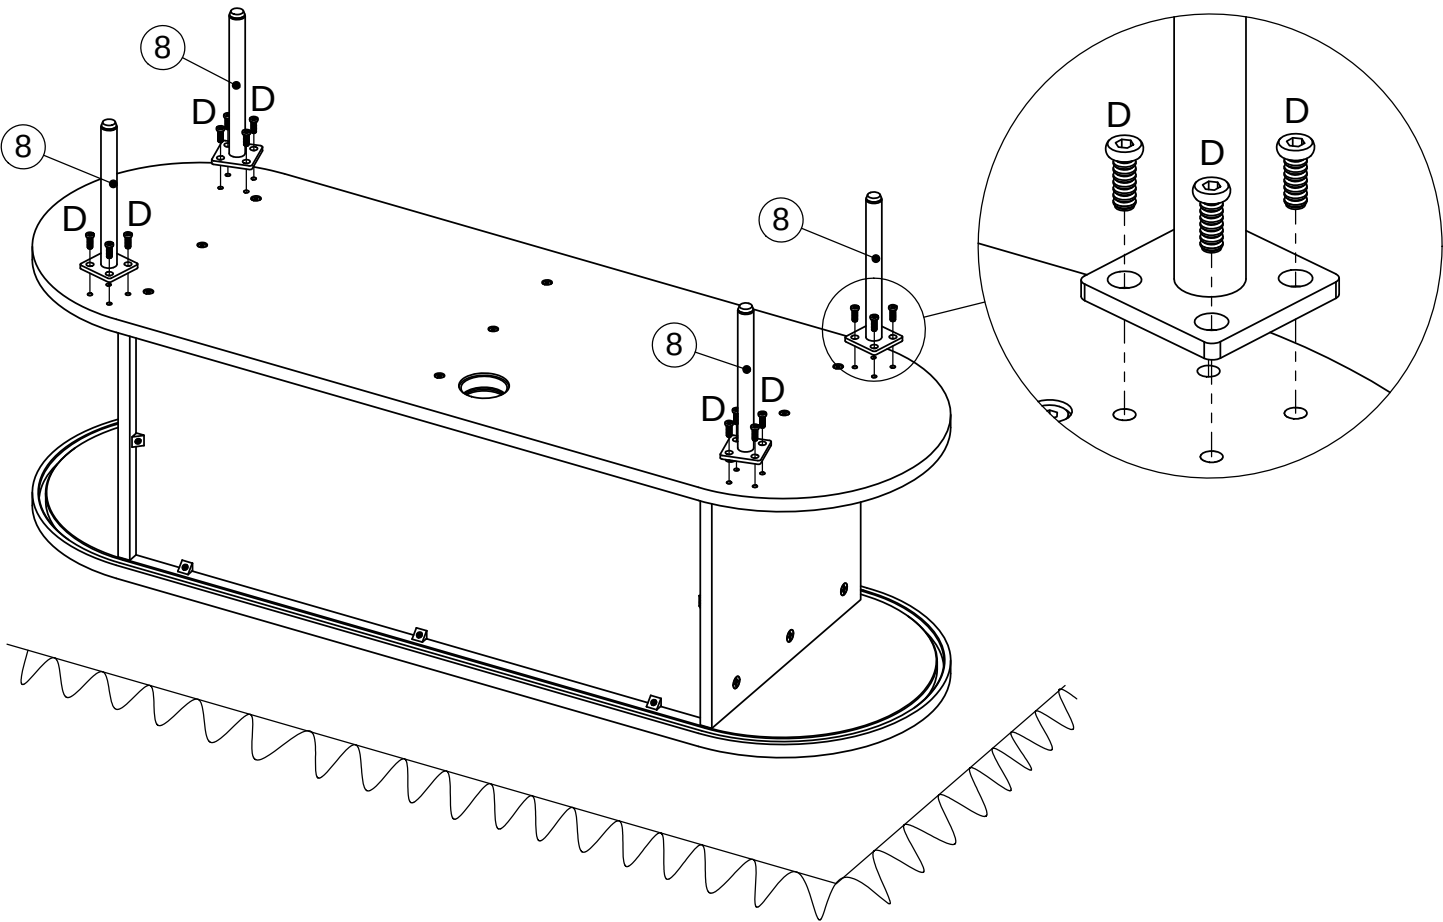


8


2 - G

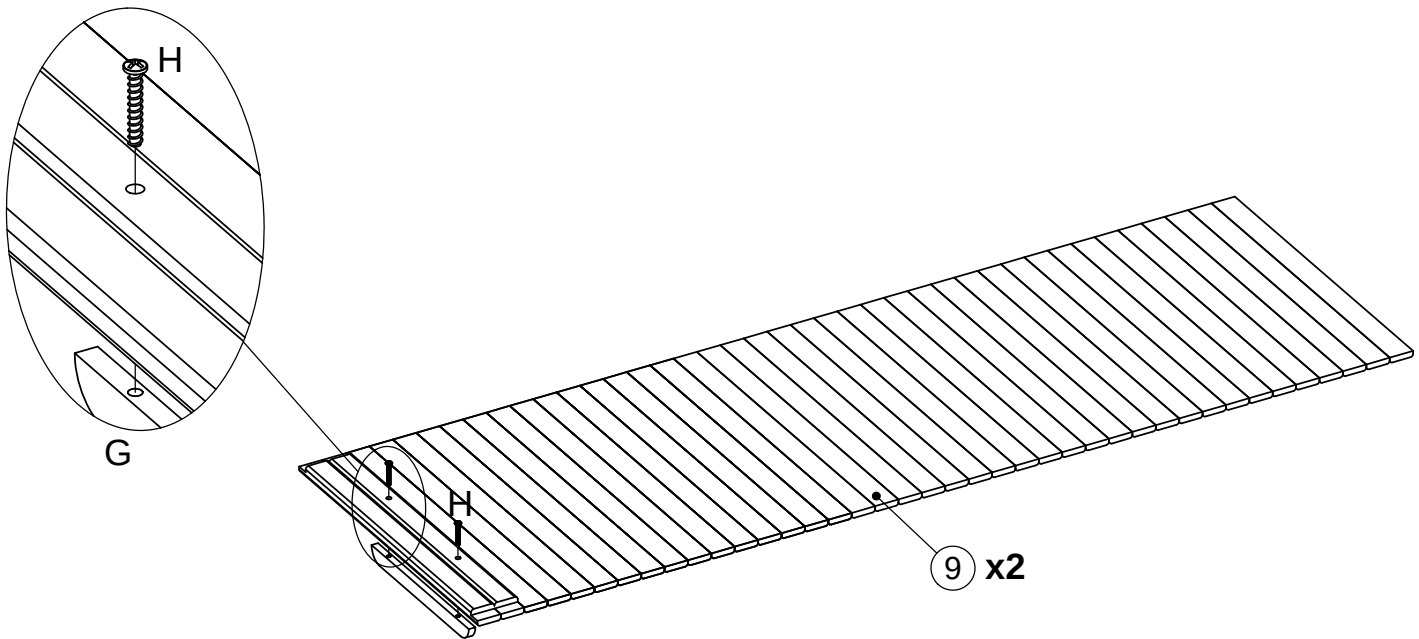


9

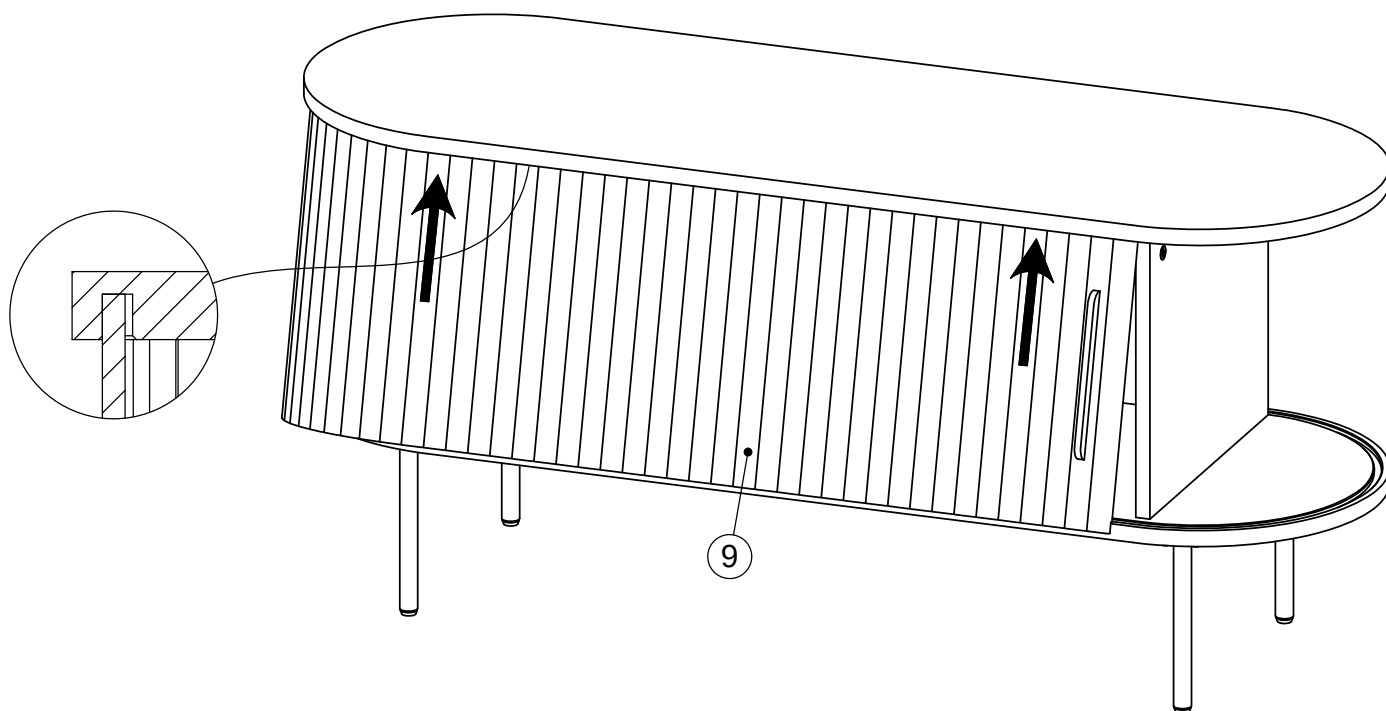


10

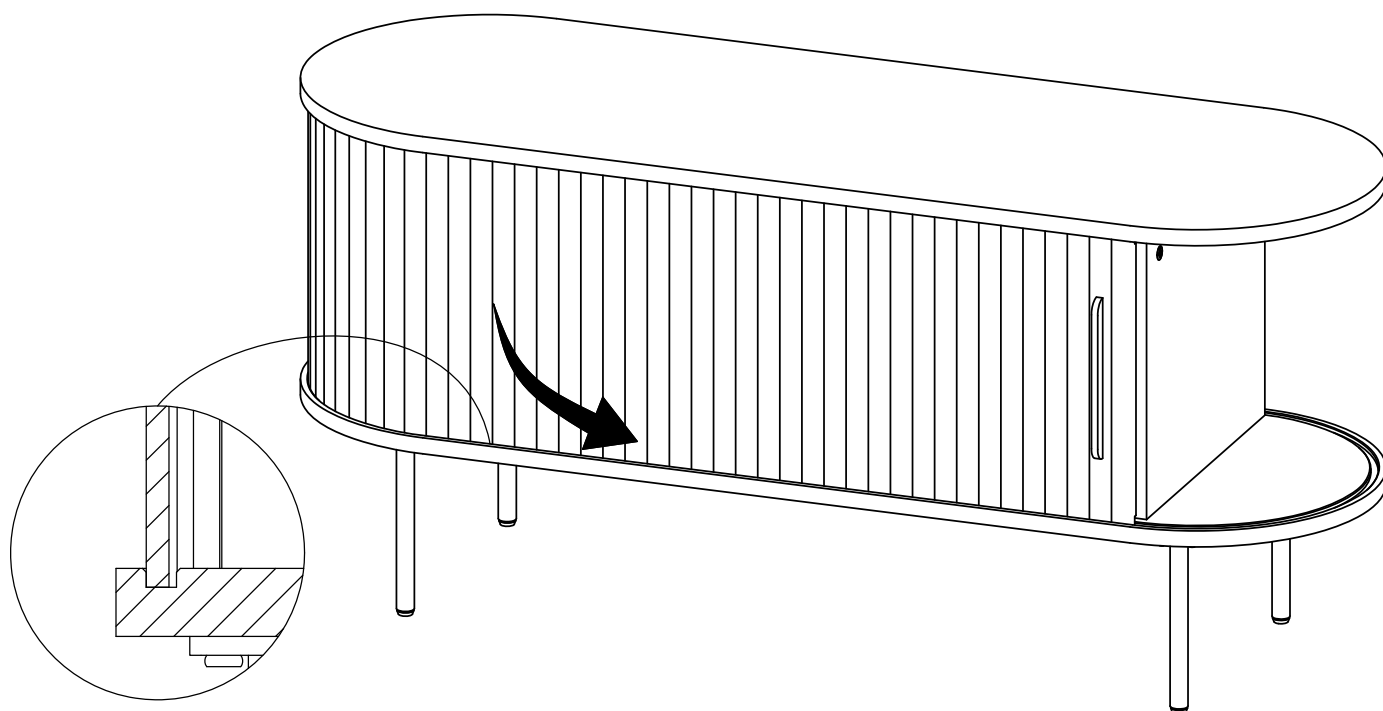

11


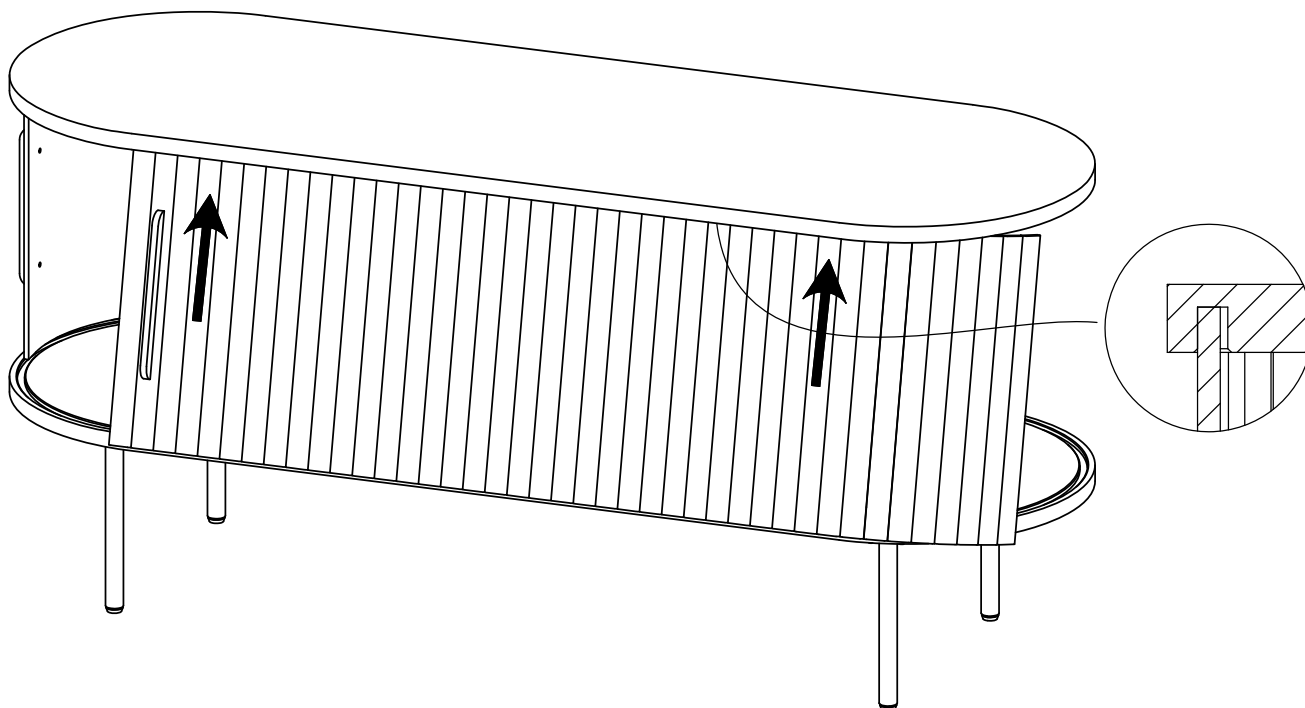


12

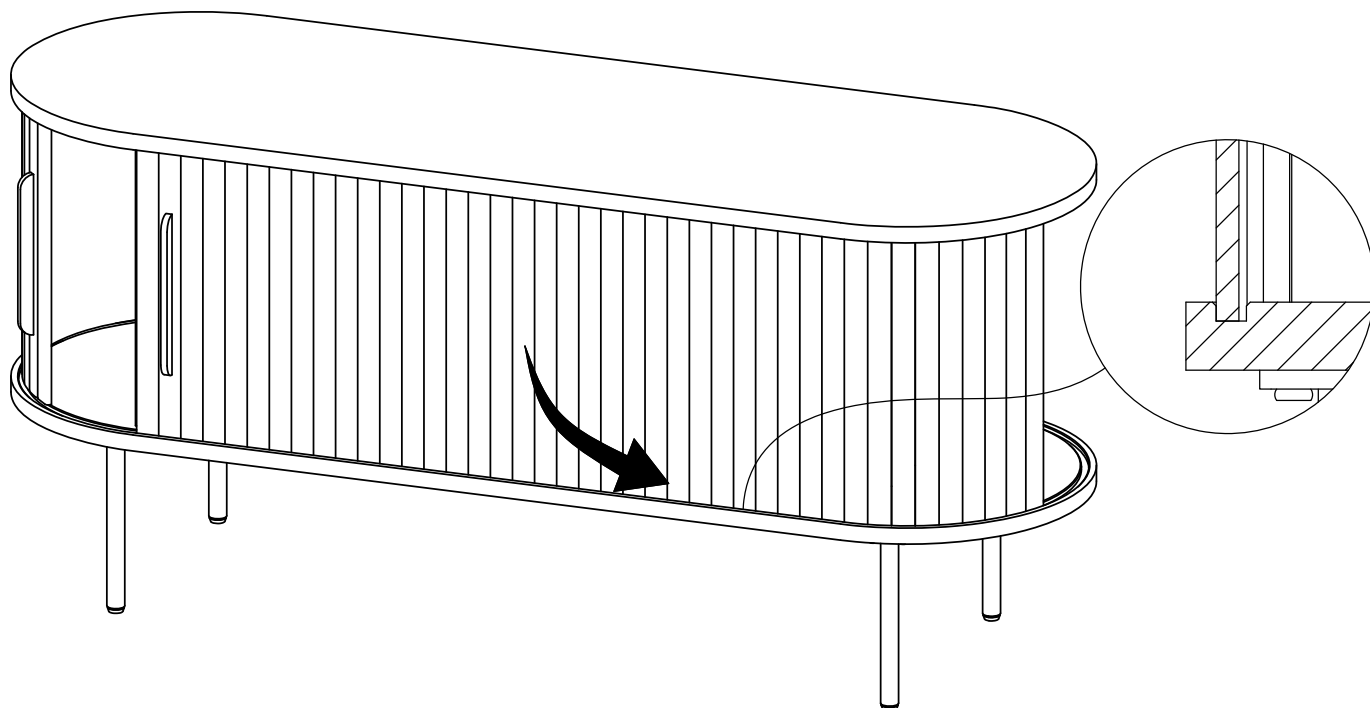


13

8 - N

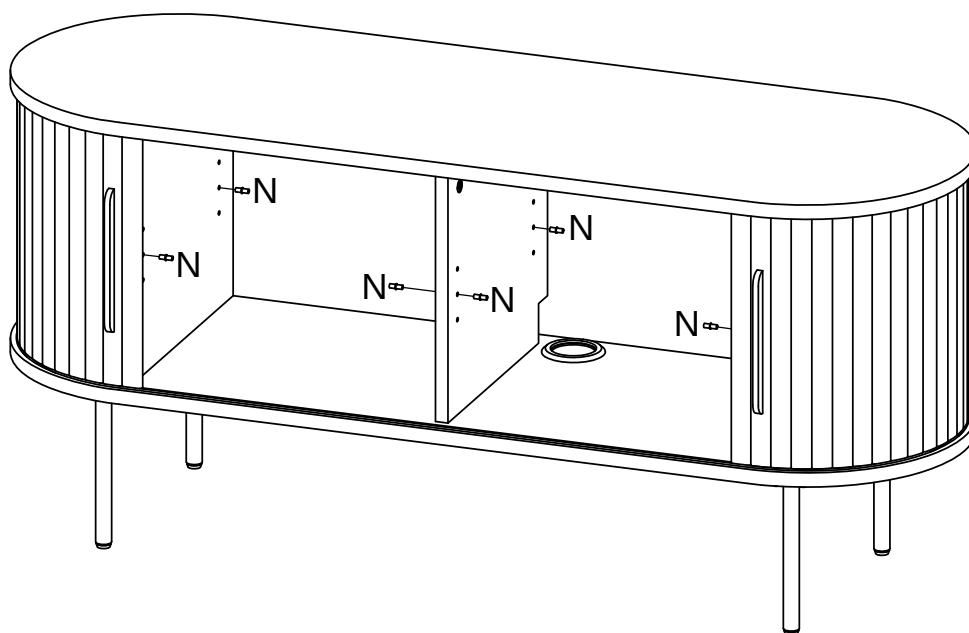

14

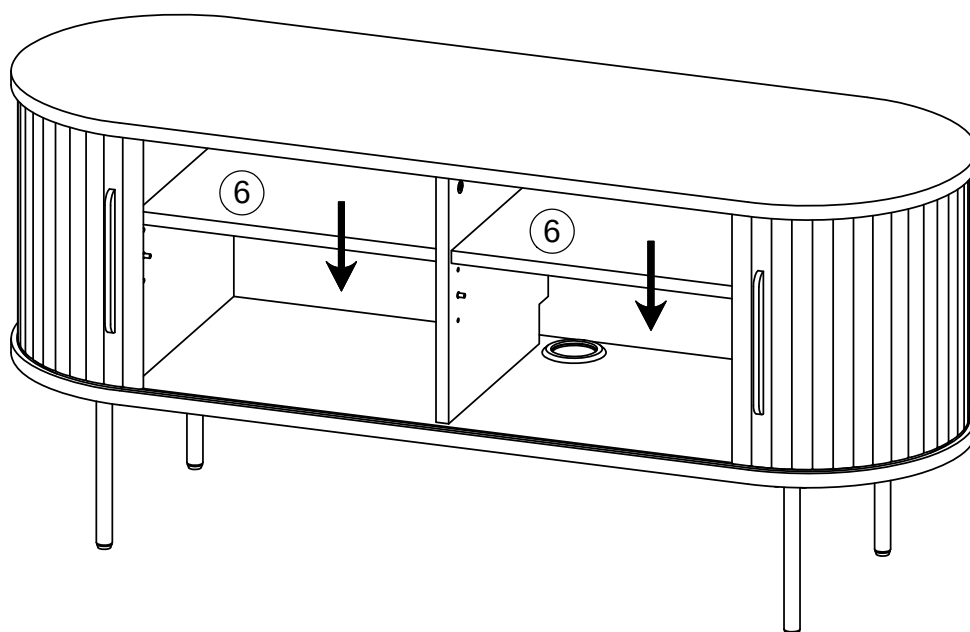

14

